

On/Off

EK

SKP

SKM-S

SK

Off -> On

On -> Off

short

on

long

off

EK Setup

3.5 mm
3.5 mm
3.5 mm
XLR

OR

www.sennheiser.com/documentation

Smart Assist

Download on the App Store

GET IT ON Google Play

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Publ. 09/26, 592859/A07

Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guía rápida
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
简要说明
快速使用指南
クイックガイド
요약 안내서

Mute

SK

SKP

SKM-S

EK Power Supply / Charging

EW-DP EK

Headphone Output

USB-C Power/Charging

Microphone Output

Battery

EK

optional:
2 AA batteries

BA 70 rechargeable
battery (included)

insert batteries
simultaneously

SKP

2 AA batteries
(included)

optional: BA 70
rechargeable battery

EW-DP SKP

Battery slot

FIX/UNFIX

3-poles
XLR plug

PIN 1	GND
PIN 2	hot (+)
PIN 3	cold (-)

unbalanced Input

Instruction Manual

Battery

SK

2 AA batteries
(included)

*optional: BA 70
rechargeable battery

SKM-S

2 AA batteries (included)

*optional: BA 70 rechargeable battery

EW-D SKM-S

EW-D SK

EK Display

Default screen

PRESS

Display page

Mute switch

Receiver battery (EK)

Transmitter battery (SK or SKM-S)

Transmitter audio level

PEAK display

Link name

Frequency

Channel

Gain

Radio frequency level

→

Instruction Manual

EK Menu

→

Gain

Output level

→

Gain +21 dB

→ →

Output level

Headphone

→

Output level -15 dB

→ →

Headphone

Mute switch

→

Headphone

→ →

Mute switch

Auto scan

→

Mute switch ignored

→ →

Auto scan

Channel

→

Auto scan 526.000 MHz (94)

→ →

Channel

Frequency

→

Channel 94 526.000 MHz

→ →

Frequency

Brightness

→

Frequency 470 .200 MHz

→ →

Brightness

Reset

→

Brightness 60 %

→ →

Reset

→

Reset to factory defaults?

Yes SET

No ESC

→ →

→

www.sennheiser.com/download

Instruction manual
Bedienungsanleitung
Notice d'emploi
Istruzioni per l'uso
Instrucciones de manejo
Manual de instruções
Gebruiksaanwijzing
Instrukcja obsługi
Bruksanvisning
Betjenings vejledning
Käyttöohje
Οδηγίες λειτουργίας
Kullanım kılavuzu
Инструкция по эксплуатации
使用说明书
取扱説明書
사용 설명서

Smart Assist

Available on the

LEDs

LINK LED/ PWR LED (SKP)

	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- Device switched off

DATA LED

	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

EK

LINK

DATA

SKM-S

DATA

LINK

SKP

DATA

LINK

SK

DATA

LINK

Identify/Battery check

On -> Identify/Check

SK/SKP/SKM-S

short Identify/Check

	LINK LED SK/SKP/SKM-S	≤ 100 %
		≤ 60 %
		≤ 20 %

Display of synced EK

Sync

1

2

OR

SK

OR

SKM-S

short press

short press

short press

EK Stacking/ Mounting plate

OR

→

Mounting instructions

SKP Attach & Record

Attach microphone

XLR-Mic

1

2

3

Switch on P48 (for condenser mics)

Record

1 insert Micro SD-Card

2 long-long press (11 sec.) ▶ format Micro SD-Card

3 short press ▶ start Rec.

4 long press (3 sec.) ▶ stop Rec.

Rec LED Pattern →

Online Manual

Mic Handling

SKM-S

ME 2

25 cm (10")

ME 3

2...3 cm (1")

ME 4