

Instruction sheet : power poles


Here's how to unfold a FaSTival using the power poles. Please use this document in combination with any other technical information and media provided by Konligo.

Please note that the structure should always be unfolded on an even, horizontal ground.


The kit for power pole includes :

- 2x power poles
- 2x pins and R-pins
- 1x safety cable for power pole (SC-TP) (660 cm long)

Lexicon

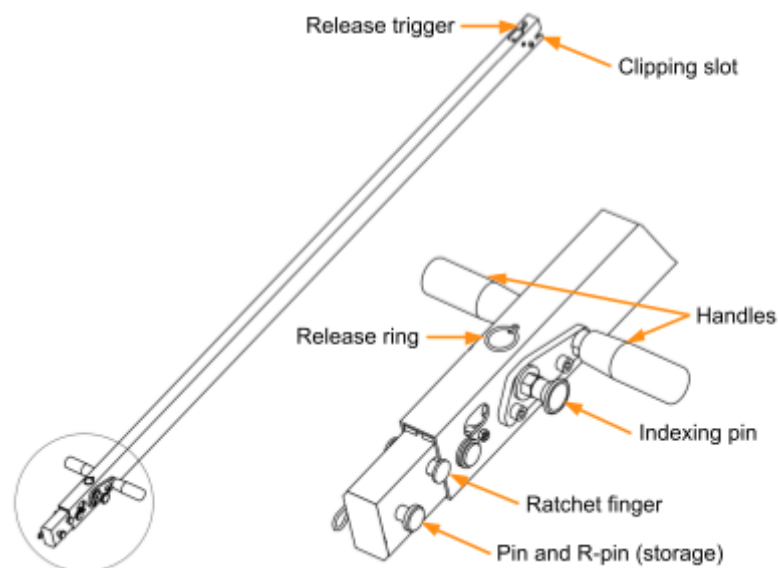


Operator's safety while raising the structure

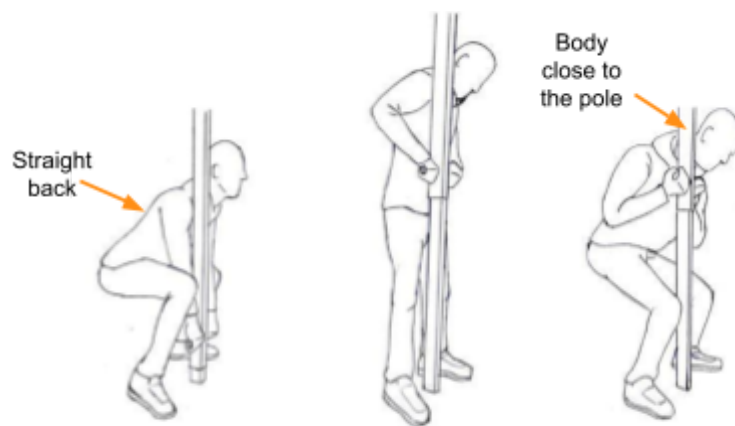

The pole must remain vertical at all time


Attaching to the structure

Fasten the provided pin and R-pin to the middle joint of the structure. Attach the power poles to the pin by using the clipping slot. Make sure that the release trigger is facing outwards. Do that on both sides of the structure.

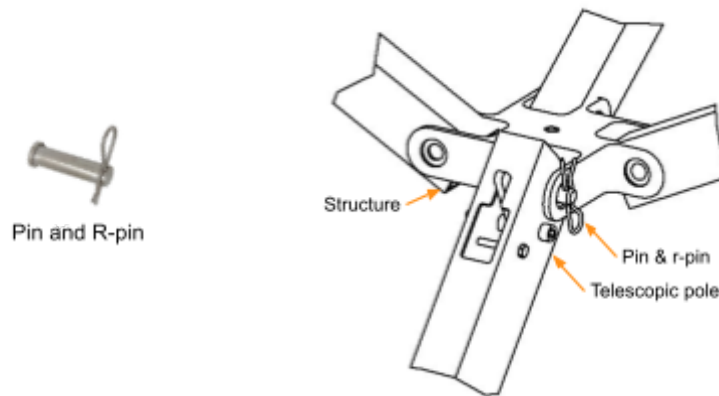

Rest on the poles

Lift the structure and put the poles under it, so that they hold the weight of the structure.

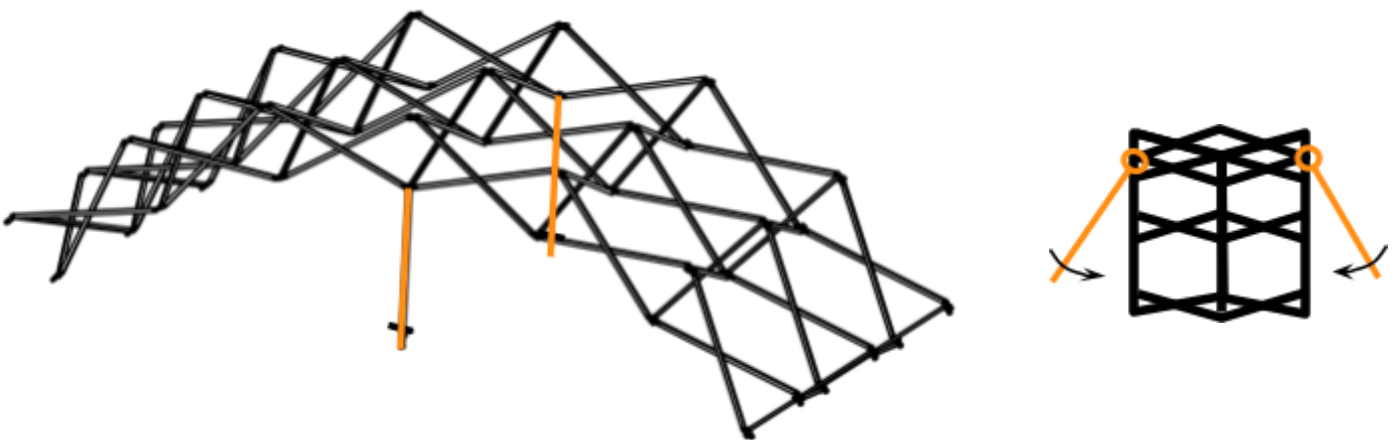


- power poles must remain vertical at all times.
- Both power poles must be deployed at the same time.

If not handled with care, people's and equipment safety is at risk!


Unfold the structure

Unlock the indexing pin and raise the structure whilst respecting the safety measures. Once the poles are totally deployed, attach the safety cable for power pole (SC-TP) at the centre joints, as shown below.

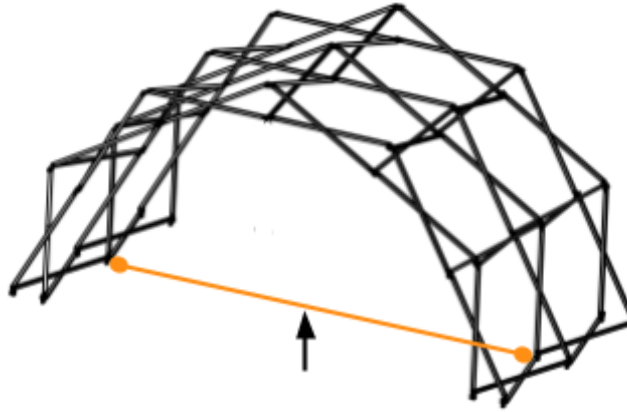

Removing the poles

- Remove the power poles by (1) pulling the release ring, then (2) angling the poles outwards, and (3) pulling down.
- Fold the power poles by pushing the ratchet finger. Be careful not to pinch your fingers ! Once folded, lock them back using the indexing pin.

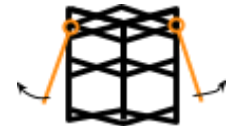

Finalization

- Fully unfold the structure by pulling the safety cable for power pole (SC-TP) upwards until you can attach the locking cables
- Finish the installation by following the provided instructions for standard unfolding.