




USER GUIDE


Amp

Performance power amplifier

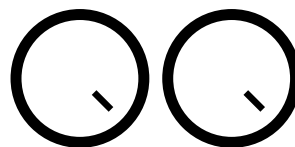

Amplifiers




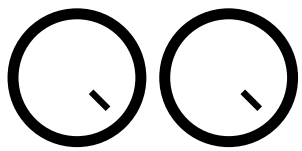

Amplifiers

Amp

Performance power amplifier

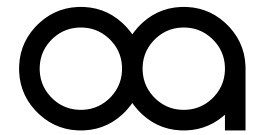

Optimal Audio



Congratulations on your choice of Optimal Audio for your latest sound system installation.

The Optimal Audio range of compatible audio zoners, controller, amplifiers and loudspeakers are designed to work together simply and effectively. Our quick start guides will take you through connectivity and set up in a straightforward style that reflects the Optimal Audio brand.

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info



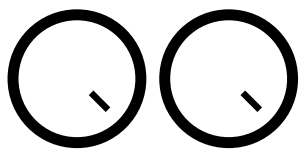

Amplifiers

Amp

Performance power amplifier



Optimal Audio

There are three amplifiers in the Amp range:

Amp 100

Two channels of Class A/B amplification, 350W per channel at 4 Ω , 250W per channel at 8 Ω and 700W Bridged at 8 Ω



Amp 200

Two channels of Class A/B amplification, 700W per channel at 4 Ω , 400W per channel at 8 Ω and 1400W Bridged at 8 Ω



Amp 300

Two channels of Class A/B amplification, 1350W per channel at 4 Ω , 800W per channel at 8 Ω and 2700W Bridged at 8 Ω



USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector




Outputs

Zone controller

Maintenance

Tech specs

Safety info

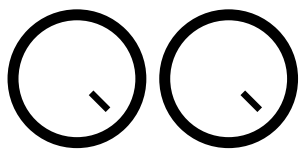

Amplifiers

Amp

Performance power amplifier



Optimal Audio



Start using your Amp

All models in the Amp range feature identical rear panel layouts. Input signal can be direct from an Optimal Audio Zone controller, or a line signal from an external source.

- If using with a Zone controller make sure the rear panel gain switch is depressed in 'Zone' position. If using with another source set to '32dB' position
- Input is via balanced or unbalanced XLR or 1/4" TRS Jack connector
- Select the operation mode STEREO-BRIDGE-PARALLEL detailed later in this user guide
- Connect amplifier outputs to loudspeakers via speakON® or binding post. Refer to the diagrams in this user guide or information on the Amp rear panel for the correct wiring

- Once you have connected everything up, plug your Amp into the mains power and turn it on
- Turn the relevant amplifier channel volume knob on the front panel all the way up
- Green LED's will illuminate on the channels to which signal is applied. These will illuminate Red if the amplifier is in clip

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info



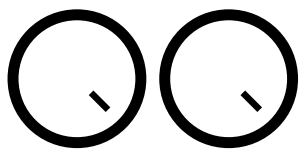

Amplifiers


Amp

Performance power amplifier



Optimal Audio

Front Panel Controls

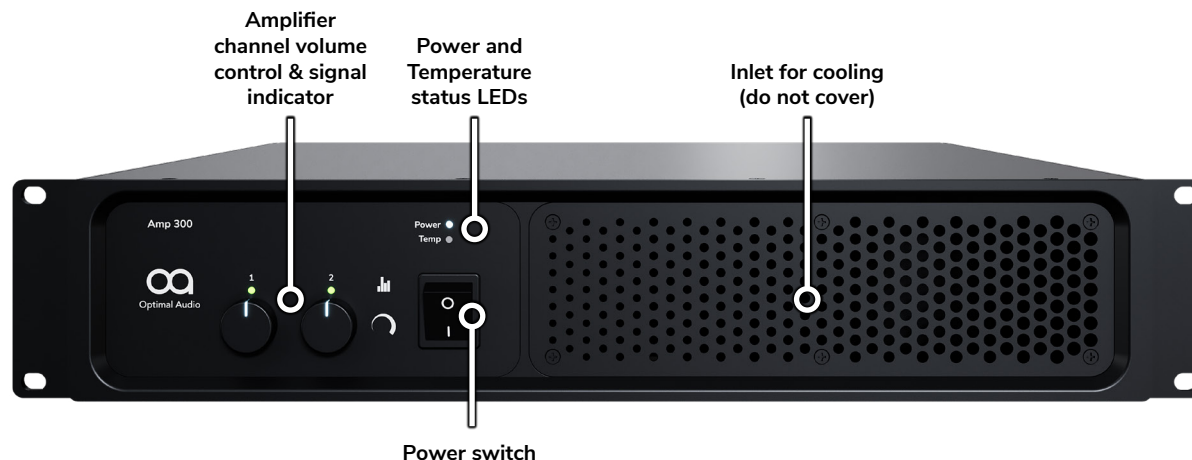

Powering Up

Amp is supplied in two voltage models, 240V AC 50/60Hz and 120V AC 60Hz. Use the mains cable appropriate to your region as supplied with the amplifier and connect it to a switched mains supply.

Amp has a mains power switch on the front panel. Position 'O' is OFF and position 'I' is ON. Ensure that all signal and output connections are made and that all switch options are selected appropriately before connecting the amplifier to mains power.

NOTE

On power up the 'Temp' LED will flash red; the unit is ON when the 'Power' LED is illuminated white.

If the Temp LED remains illuminated or illuminates during operation excessive temperature has been detected.. Please power OFF and check all connections.

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info



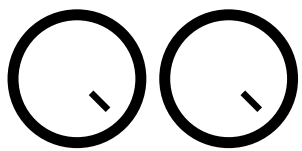

Amplifiers

Amp

Performance power amplifier




Optimal Audio

Rear Panel Connections & Controls

Amp 100, 200 and 300

All models in the Amp range feature identical rear panel layouts.

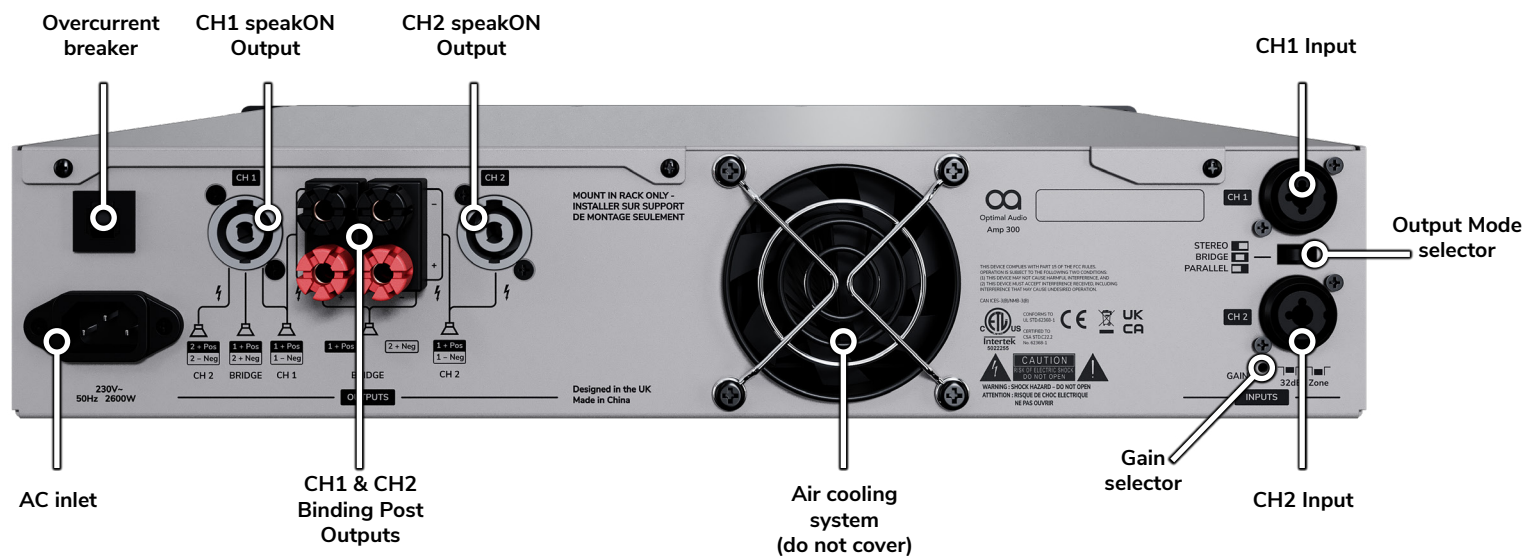

USER GUIDE

[Introduction](#)

[Overview](#)

[Start using](#)

[Power up](#)

[Rear panel](#)

[Inputs](#)

[Input gain selector](#)

[Outputs](#)

[Zone controller](#)


[Maintenance](#)

[Tech specs](#)

[Safety info](#)

<

>

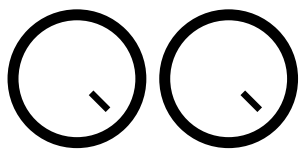

Amplifiers

Amp

Performance power amplifier



Optimal Audio




Input Connections


Amp inputs are balanced with an impedance of 15k Ω and an unbalanced impedance of 7.5k Ω . They require the use of suitable two-core, screened signal cable.

Input connections to Amp are achieved via a Combi style XLR / 1/4" TRS jack connector. Connecting cables to the supplied female input connectors is illustrated.


TRS 1/4" jack plug




Input XLR Balanced connection

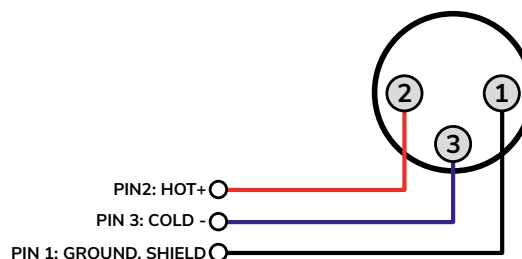

TRS 1/4" jack plug

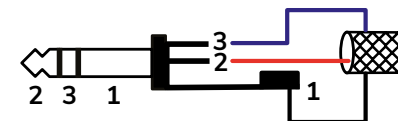

Input XLR Unbalanced connection

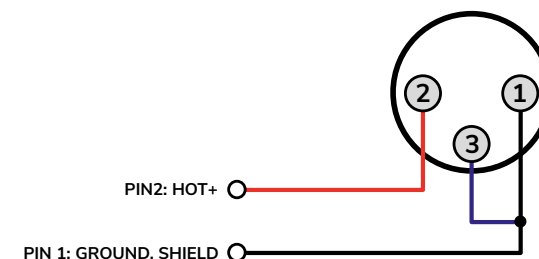

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info




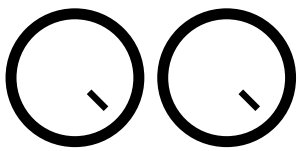

Amplifiers

Amp

Performance power amplifier

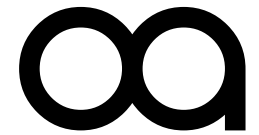

Optimal Audio

Input gain selector

Amp features a selectable input gain. This can be set via a push switch on the rear of the unit. Use a screwdriver, pen or similar device to locate and push the gain switch.


Pushing the switch to its depressed position configures Amp's input gain structure to be compatible for use with an Optimal Audio Zone processors line outputs (20dBu max).

Pushing the switch again releases it to its upper/ outward position, this configures the input to 32dB gain, for use with traditional professional audio equipment.



USER GUIDE


[Introduction](#)[Overview](#)[Start using](#)[Power up](#)[Rear panel](#)[Inputs](#)[Input gain
selector](#)[Outputs](#)[Zone controller](#)[Maintenance](#)[Tech specs](#)[Safety info](#)

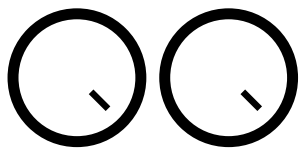

Amplifiers

Amp

Performance power amplifier

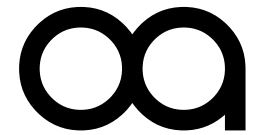


Optimal Audio

Loudspeaker Outputs

Output connections from Amp are achieved via either a speakON® or binding post connector per amplifier channel. Ensure that speaker connection polarity is correct throughout the installation: positive (+) amplifier terminals should always be connected to positive speaker terminals and negative (–) amplifier terminals always connected to negative speaker terminals.

Together with output mode switch configuration, Amp can be setup to output in Stereo (dual) channels, Bridge mono and Parallel, via either output connector type as detailed in the following diagrams.

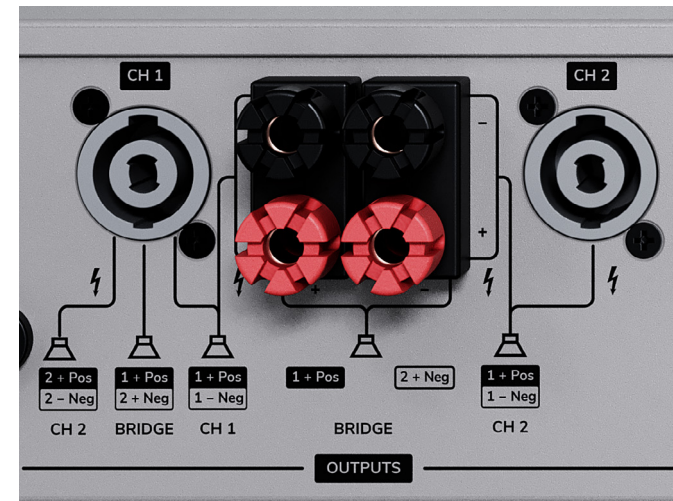

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info



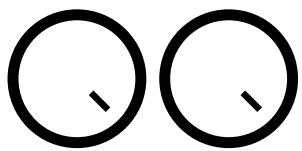

Amplifiers

Amp


Performance power amplifier



Optimal Audio

Stereo output using speakON® connectors

Set Output Mode Switch to STEREO

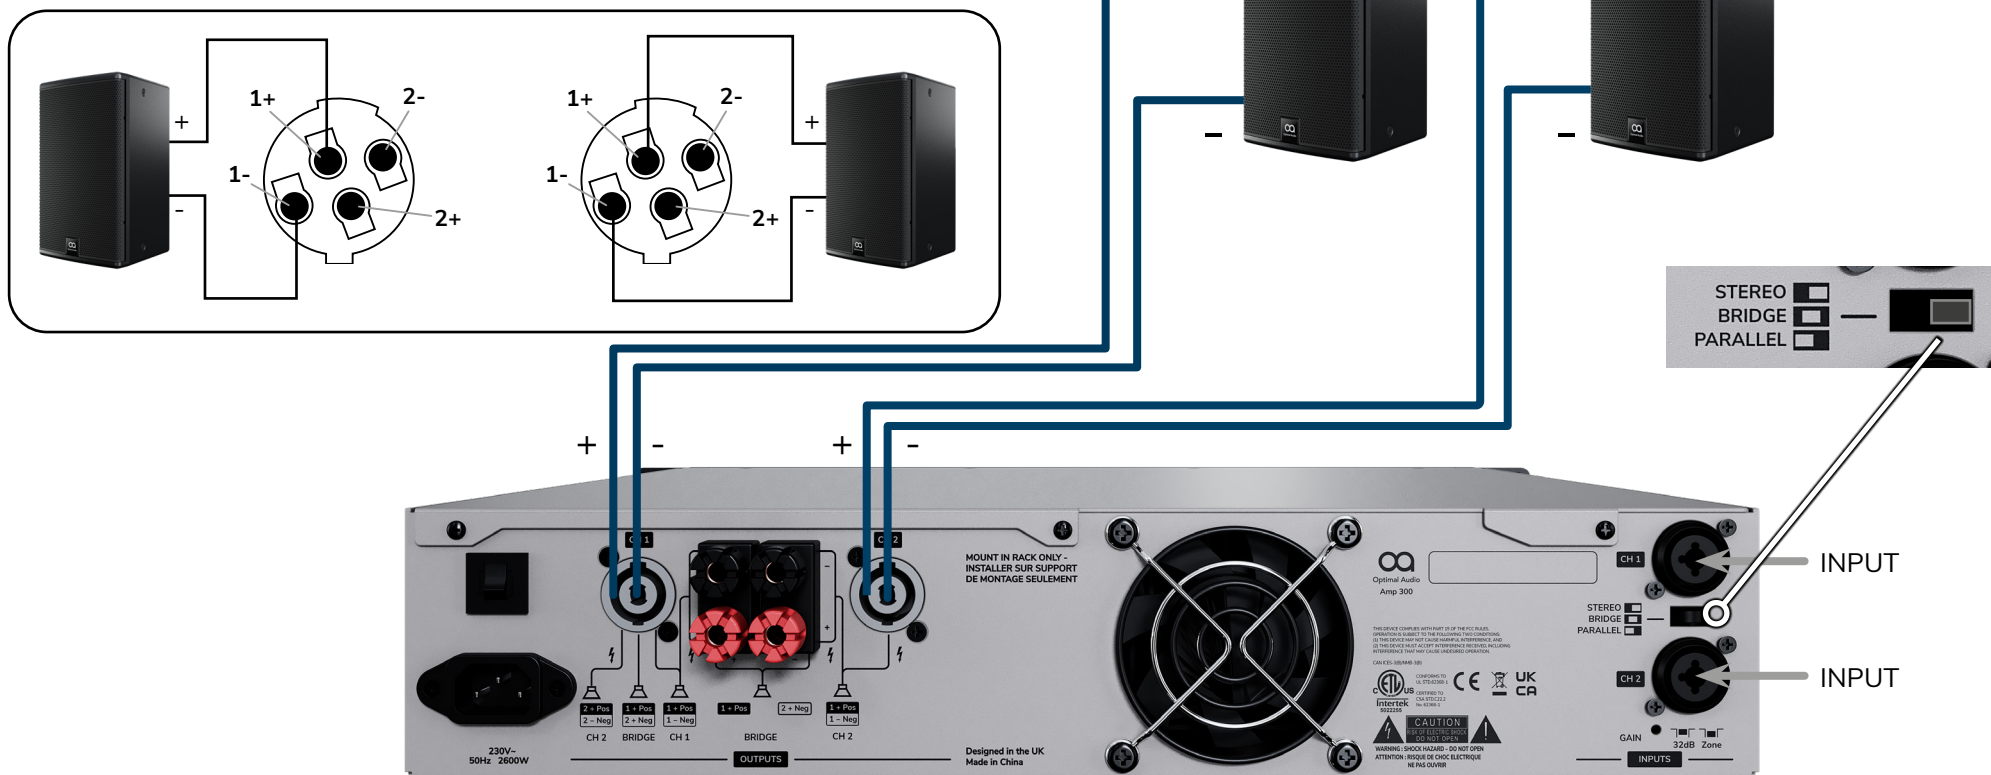

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs

Zone controller


Maintenance

Tech specs

Safety info

<


>

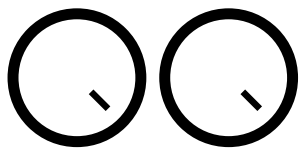

Amplifiers

Amp


Performance power amplifier

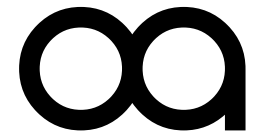

Optimal Audio

Stereo output using Binding Post connectors

Set Output Mode Switch to STEREO

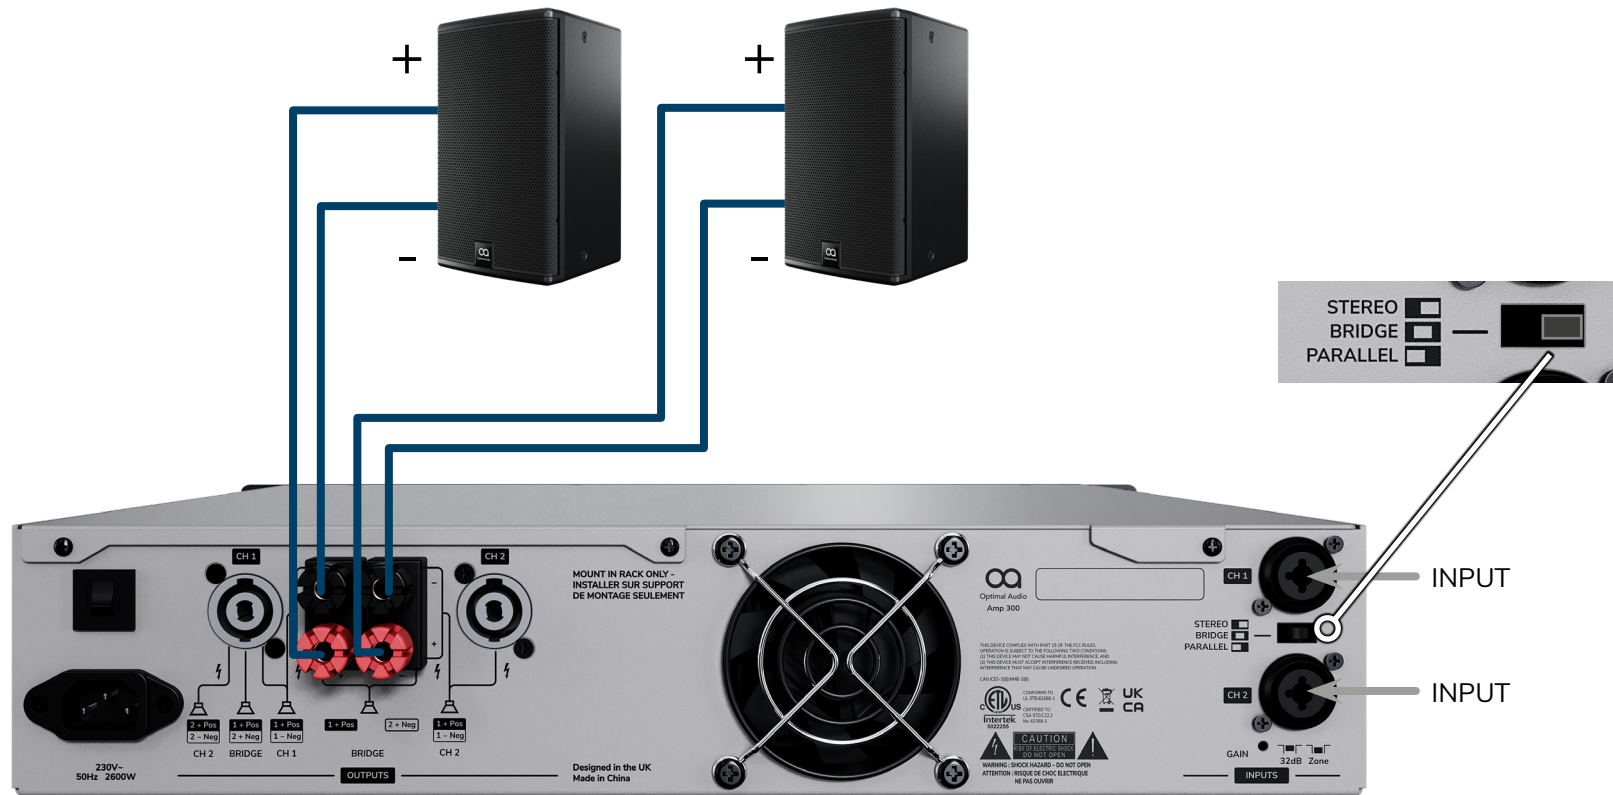

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs

Zone controller


Maintenance

Tech specs

Safety info

<

>

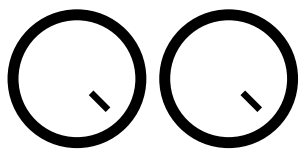

Amplifiers

Amp

Performance power amplifier




Optimal Audio

Bridge mono output using speakON® connector

Set Output Mode Switch to BRIDGE

*Note only Channel 1 volume control works in BRIDGE mode

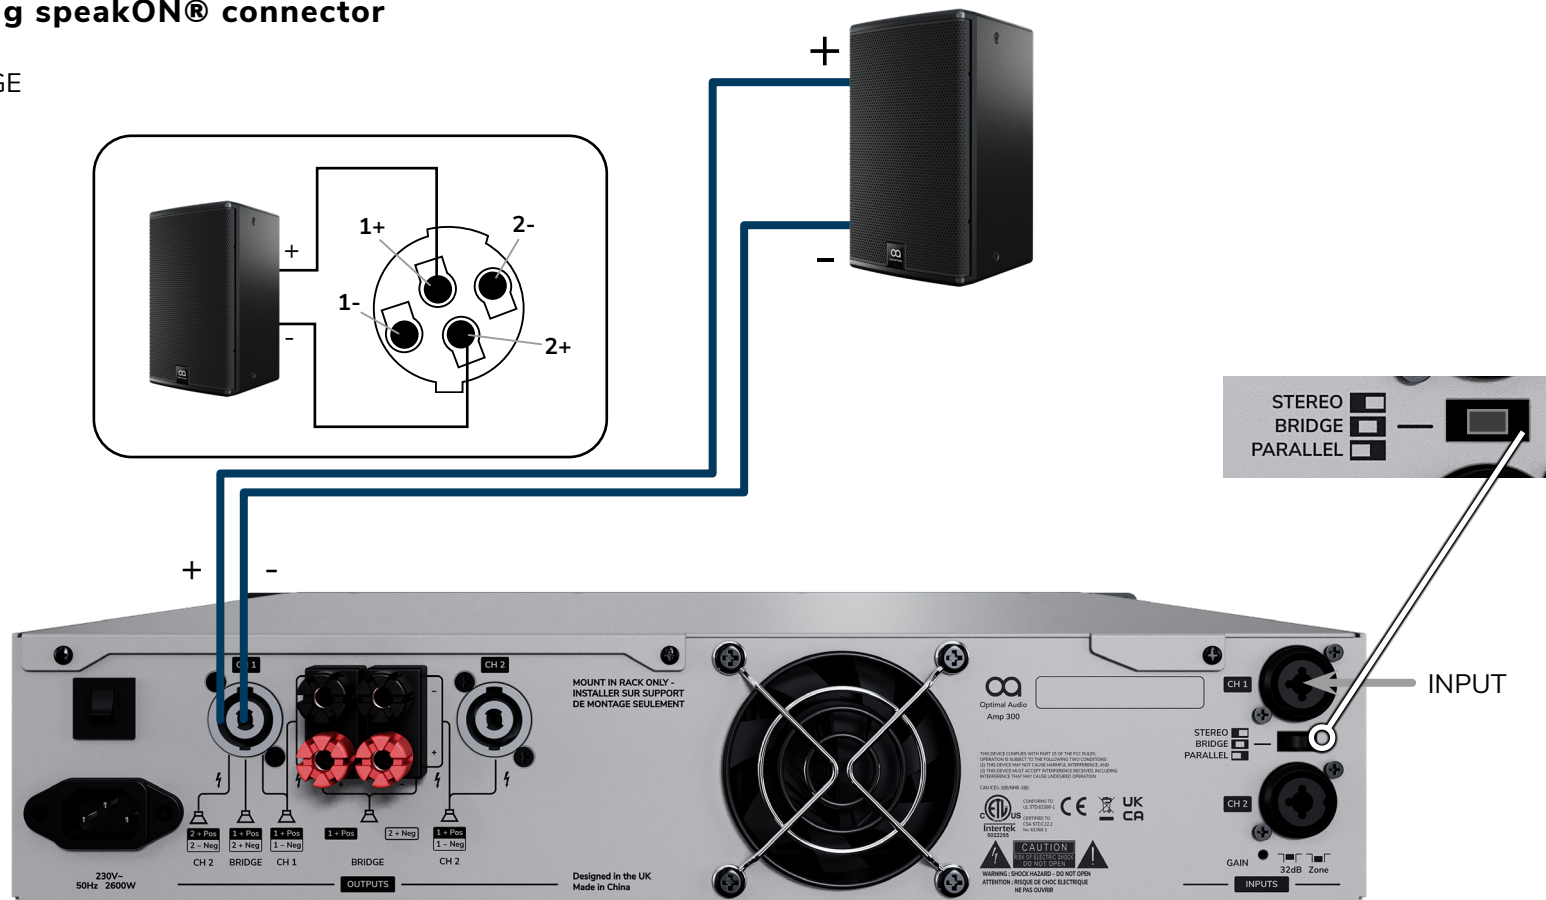

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs

Zone controller


Maintenance

Tech specs

Safety info

<


>

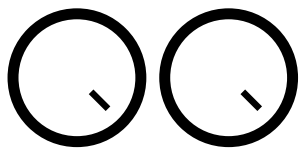

Amplifiers

Amp

Performance power amplifier

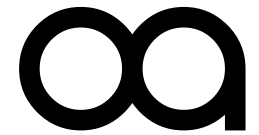


Optimal Audio

Bridge mono output using Binding Post connectors

Set Output Mode Switch to BRIDGE

*Note only Channel 1 volume control works in BRIDGE mode

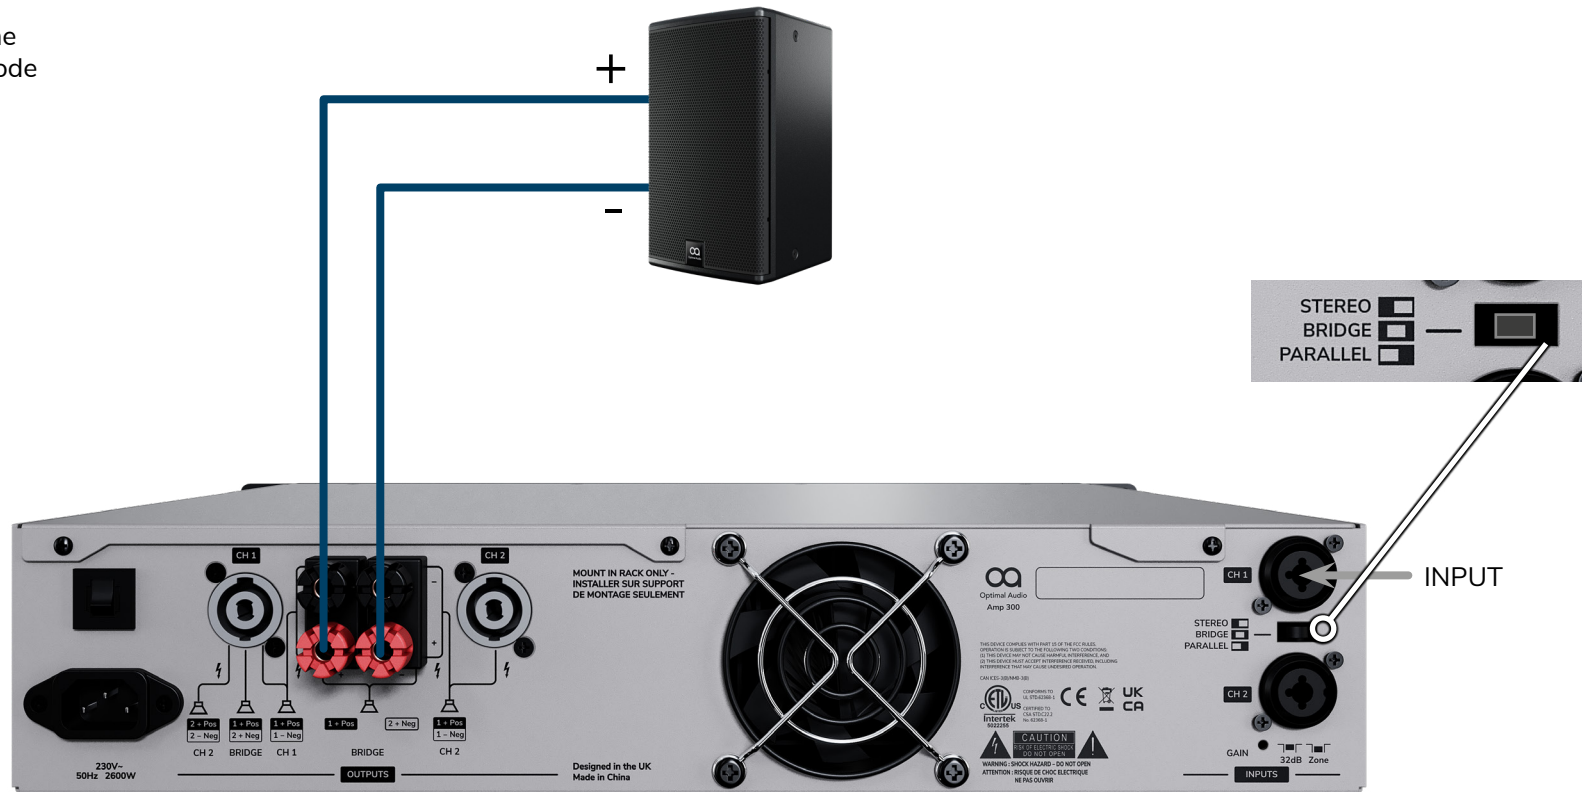

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info



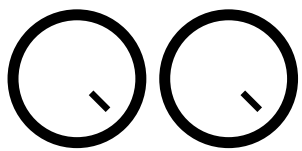

Amplifiers

Amp

Performance power amplifier




Optimal Audio

Parallel output using speakON® connectors

Set Output Mode Switch to PARALLEL

Signal sent to one input channel is output on both speaker output channels

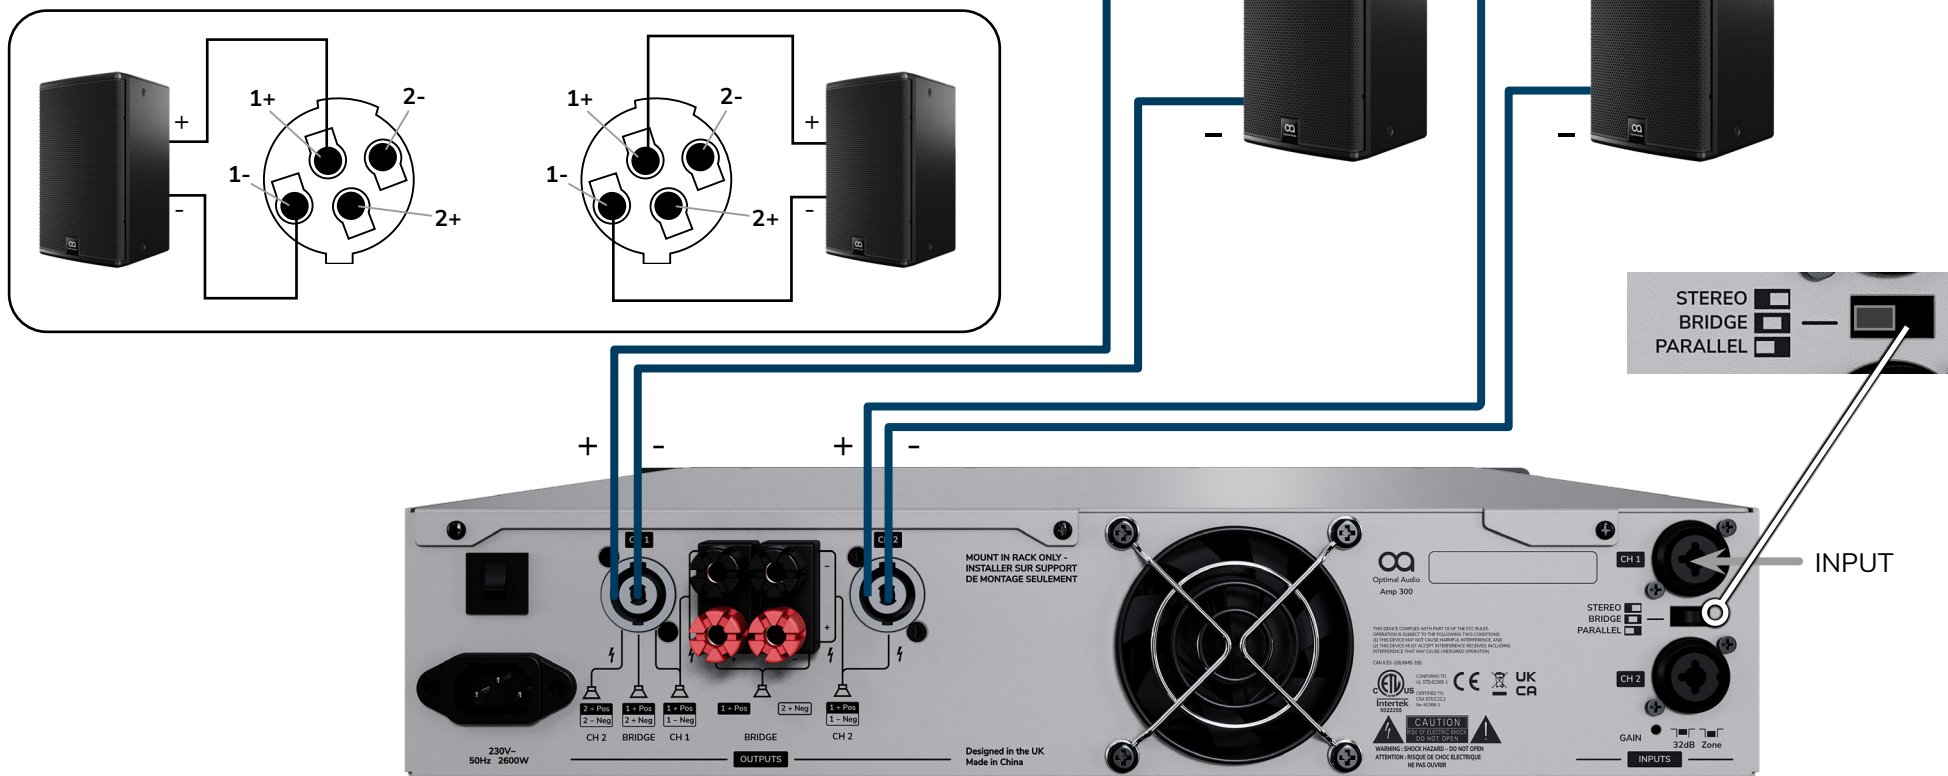

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info




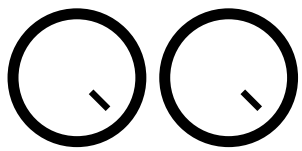

Amplifiers

Amp

Performance power amplifier

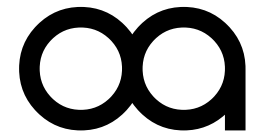


Optimal Audio

Parallel output using Binding Post connectors

Set Output Mode Switch to PARALLEL

Signal sent to one input channel is output on both speaker output channels

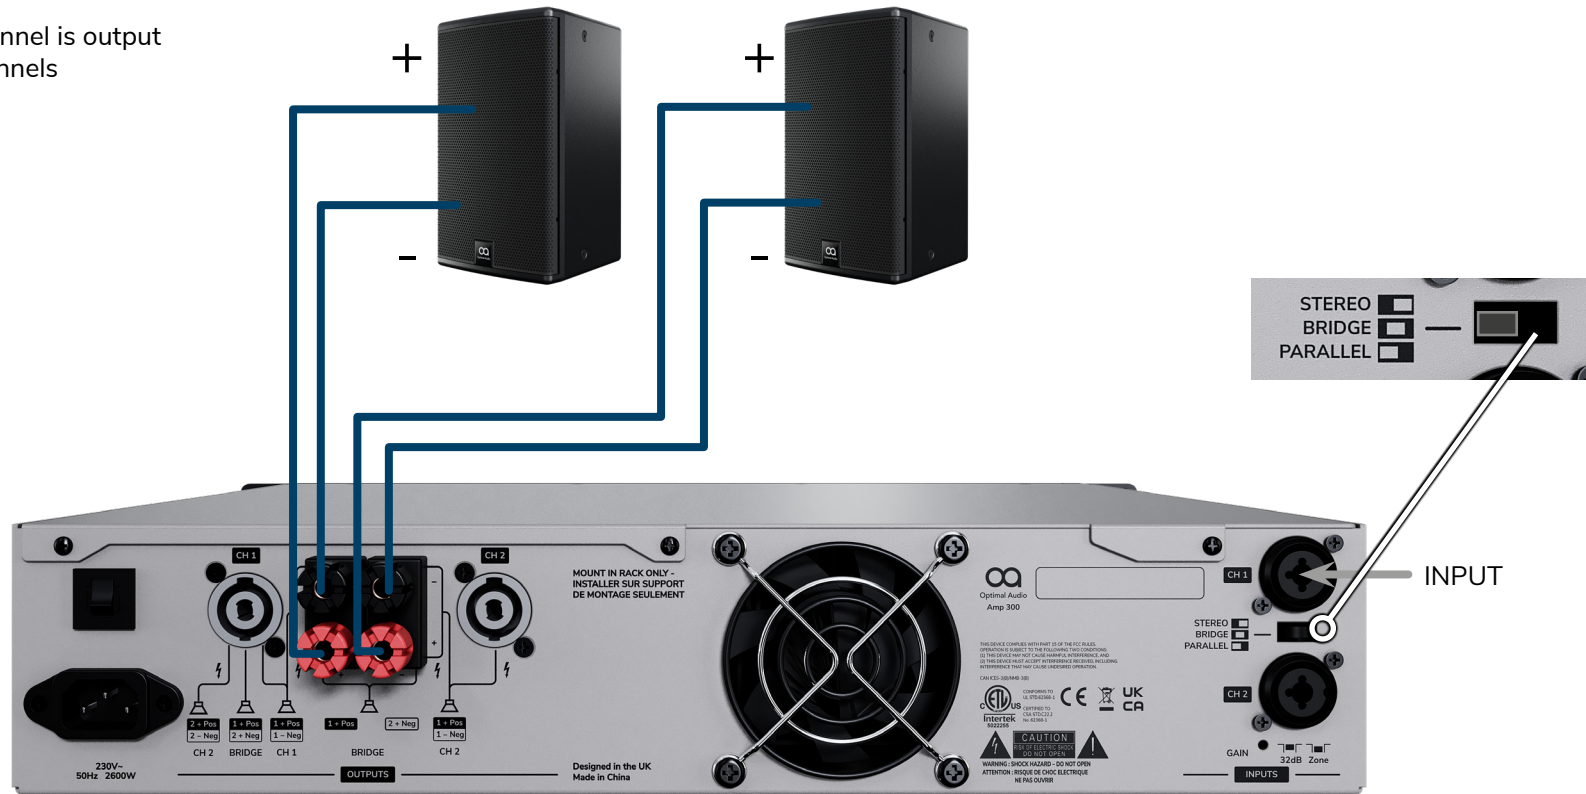

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs

Zone controller


Maintenance

Tech specs

Safety info

<


>

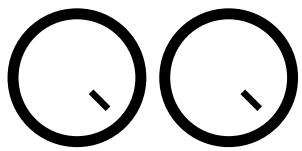


Amplifiers

Amp

Performance power amplifier

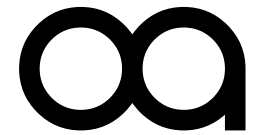

Optimal Audio

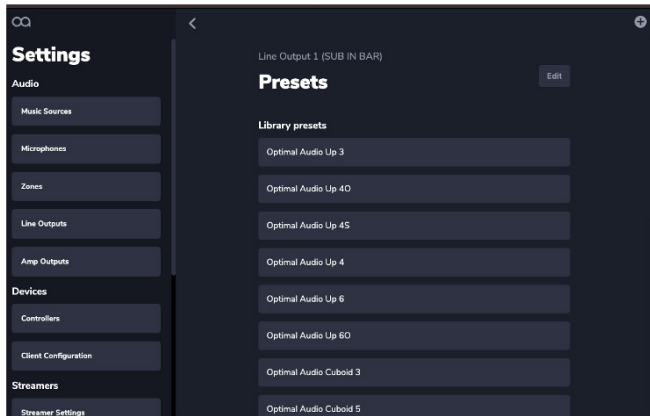

Zone & Amp – The perfect partners

Connect Amp to Zone processor to access a full suite of Optimal Audio loudspeaker presets, limiters, and much more, easily configurable via Zone's onboard WebApp. Amp does not come with onboard DSP.



USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs

Zone controller


Maintenance

Tech specs

Safety info

<

>

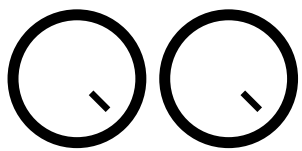

Amplifiers

Amp

Performance power amplifier



Optimal Audio

Maintenance

Your Optimal Audio Amp should require minimal maintenance and prove to be a reliable workhorse in your sound system

If in doubt, contact your distributor, who will help you with whatever you need to keep your Optimal Audio system running at its best.

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs

Zone controller

Maintenance

Tech specs

Safety info


<

>

	Amp 100	Amp 200	Amp 300
TYPE	CLASS AB power amplifier	CLASS AB power amplifier	CLASS AB power amplifier
POWER OUTPUT (4Ω-16Ω)	4Ω: 350W / 8Ω: 250W / 8Ω BRIDGED: 700W	4Ω: 700W / 8Ω: 400W / 8Ω BRIDGED: 1400W	4Ω: 1350W / 8Ω: 800W / 8Ω BRIDGED: 2700W
COOLING	Force air cooling with fan	Force air cooling with fan	Force air cooling with fan
ANALOGUE IN/LINK	Jack/XLR combo inputs	Jack/XLR combo inputs	Jack/XLR combo inputs
ANALOGUE INPUT IMPEDANCE	7.5kOhms unbalanced, 15kOhms balanced	7.5kOhms unbalanced, 15kOhms balanced	7.5kOhms unbalanced, 15kOhms balanced
MAXIMUM ANALOGUE INPUT LEVEL	+20dBu	+20dBu	+20dBu
AMPLIFIER OUTPUTS	Speakon / 4mm binding posts	Speakon / 4mm binding posts	Speakon / 4mm binding posts
SIGNAL TO NOISE RATIO	102dB	104dB	107dB
FREQUENCY RESPONSE	20-20k, +0, -0.5dB	20-20k, +0, -0.5dB	20-20k, +0, -0.5dB
TOTAL HARMONIC DISTORTION	<0.03% @ 1W	<0.03% @ 1W	<0.03% @ 1W
SLEW RATE	9.31V/us, 8 ohm load	9.31V/us, 8 ohm load	9.31V/us, 8 ohm load
DAMPING FACTOR	>400, 8ohm load	>400, 8ohm load	>400, 8ohm load
MAINS POWER INPUT	120V, 230V variants	120V, 230V variants	120V, 230V variants
MAINS CONNECTOR	IEC	IEC	IEC
DIMENSIONS	(W) 482mm x (H) 88mm x (D) 426mm (W) 18.97" x (H) 3.45" x (D) 16.77"	(W) 482mm x (H) 88mm x (D) 426mm (W) 18.97" x (H) 3.45" x (D) 16.77"	(W) 482mm x (H) 88mm x (D) 426mm (W) 18.97" x (H) 3.45" x (D) 16.77"
WEIGHT	14.76kg (32.54lbs)	17.06kg (37.61lbs)	20.09kg (44.29lbs)
ACCESSORIES (optional)	Rear rack support	Rear rack support	Rear rack support

USER GUIDE


Introduction	Overview	Start using	Power up	Rear panel	Inputs	Input gain selector
Outputs	Zone controller	Maintenance	Tech specs	Safety info		

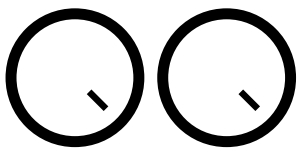

Amplifiers

Amp

Performance power amplifier

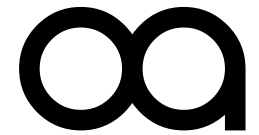

Optimal Audio



WARNING!

**DO NOT EXPOSE THIS EQUIPMENT
TO RAIN OR MOISTURE**

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of **sufficient magnitude to constitute a risk** of electric shock to persons.

THIS EQUIPMENT MUST BE EARTHED

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation opening. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. To reduce the risk of electrical shock, the power cord shall be connected to a mains socket outlet with a protective earthing connection.
10. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Do not unplug the unit by pulling on the cord, use the plug.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The appliance coupler, or the AC Mains plug, is the AC mains disconnect device and shall remain readily accessible after installation.
16. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
17. Do not remove any covers, loosen any fixings or allow items to enter any aperture.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

USER GUIDE

Introduction

Overview

Start using

Power up

Rear panel

Inputs

Input gain
selector

Outputs


Zone controller

Maintenance

Tech specs

Safety info



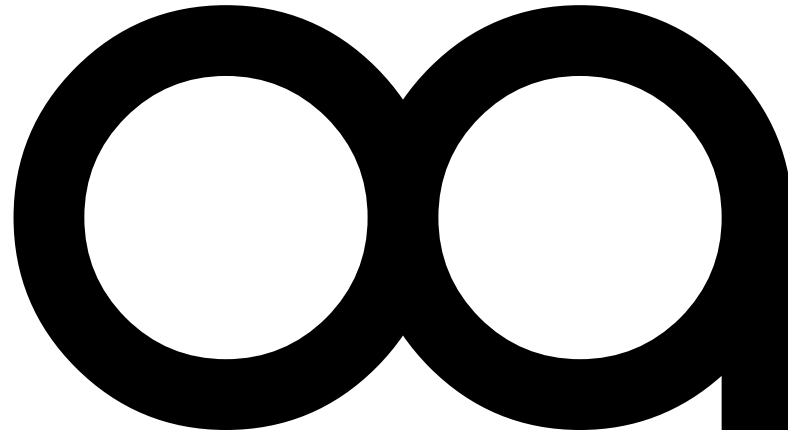

Relax, It's Optimal Audio.

optimal-audio.co.uk

Optimal Audio Group Ltd.
Century Point, Halifax Road,
Cressex Business Park,
High Wycombe,
Buckinghamshire,
HP12 3SL