
USER MANUAL

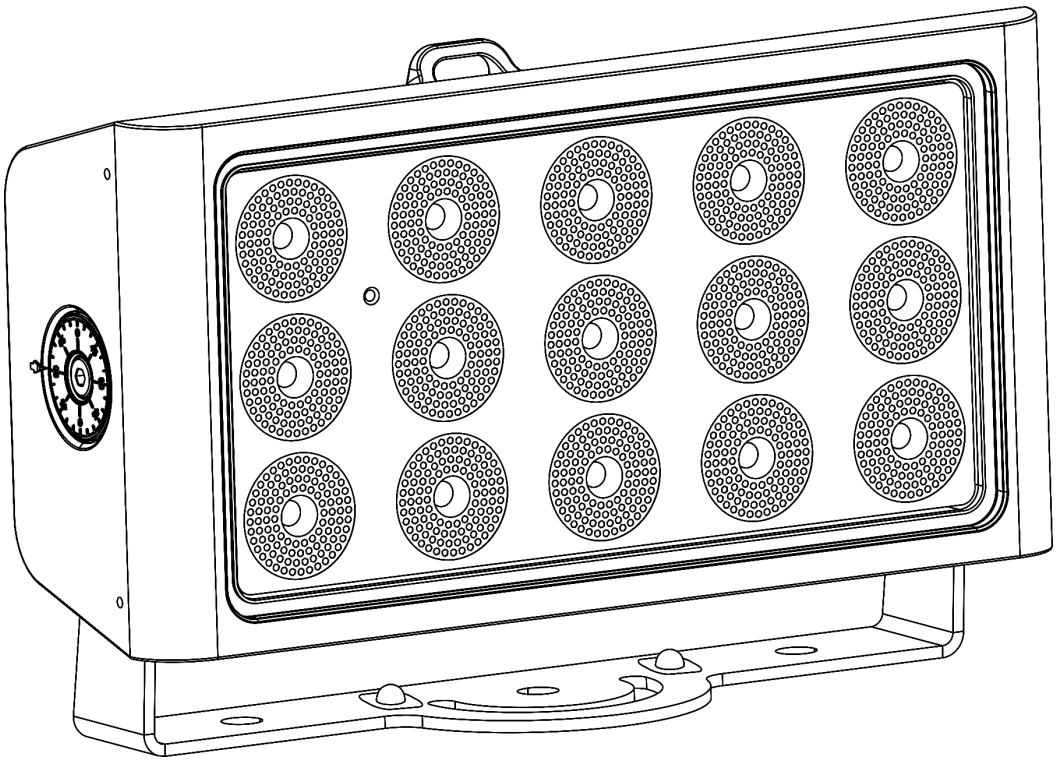

ENGLISH

Cameleon Flood 15 Q4 Tour V2

Product code: 42681

Preface

Thank you for purchasing this Showtec product.

The purpose of this user manual is to provide instructions for the correct and safe use of this product.

Keep the user manual for future reference as it is an integral part of the product. The user manual shall be stored at an easily accessible location.

This user manual contains information concerning:

- Safety instructions
- Installation and operation of the device
- Intended and non-intended use of the device
- Maintenance procedures
- Troubleshooting
- Transport, storage and disposal of the device

Non-observance of the instructions in this user manual may result in serious injuries and damage of property.

©2026 Showtec. All rights reserved.

No part of this document may be copied, published or otherwise reproduced without the prior written consent of Highlite International.

Design and product specifications are subject to change without prior notice.

For the latest version of this document or other language versions, please visit our website www.highlite.com or contact us at service@highlite.com.

Highlite International and its authorized service providers are not liable for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss arising from the use of, or inability to use or reliance on the information contained in this document.

Table of contents

1. Introduction 4
1.1. Before Using the Product 4
1.2. Intended Use 4
1.3. Product Lifespan 4
1.4. LEDs Lifespan 4
1.5. Text Conventions 4
1.6. Symbols and Signal Words 5
1.7. Symbols on the Information Label 5

2. Safety 6
2.1. Warnings and Safety Instructions 6
2.2. Requirements for the User 8

3. Description of the Device 9
3.1. Front View 9
3.2. Back View 9
3.3. Product Specifications 10
3.4. Optional Accessories 10
3.5. Dimensions 11

4. Installation 11
4.1. Safety Instructions for Installation 11
4.2. Personal Protective Equipment 11
4.3. Installation Site Requirements 11
4.4. Rigging 12
4.4.1. Angle Adjustment 12
4.5. Connecting to Power Supply 13
4.6. Power Linking of Multiple Devices 13

5. Setup 14
5.1. Warnings and Precautions 14
5.2. Stand-alone Setup 14
5.3. DMX Connection 14
5.3.1. DMX-512 Protocol 14
5.3.2. DMX Cables 15
5.3.3. Master/Slave Setup 15
5.3.4. DMX Linking 16
5.3.5. DMX Addressing 16

6. Operation 17
6.1. Safety Instructions for Operation 17
6.2. Control Modes 17
6.3. Control Panel 18
6.4. Start-up 18
6.5. Menu Overview 19
6.6. Main Menu Options 21
6.6.1. DMX Settings 21
6.6.1.1. Address 22
6.6.1.2. Channels 22
6.6.2. Manual Mode 22
6.6.3. Auto 23
6.6.4. Program 23
6.6.4.1. Program 01 24
6.6.4.2. Programs 02–16 24
6.6.5. Master/Slave Mode 24
6.6.6. Settings 25

6.6.6.1. Curves Select 25
6.6.6.2. Dimmer Speed 26
6.6.6.3. DMX Fail 26
6.6.6.4. DMX Sync 26
6.6.6.5. Key Lock 27
6.6.6.6. Factory 27
6.6.7. Information 27
6.7. DMX Channels 28
6.7.1. 4 Channels, 6 Channels, 10 Channels 28
6.8. Supported RDM PIDs (Parameter IDs) 29
6.9. Remote Control 30
6.9.1. Auto 32
6.9.2. Built-in Programs 32
6.9.2.1. Color Presets 32
6.9.2.2. Strobe 32
6.9.2.3. Program Speed 33
6.9.3. Manual 33

7. Troubleshooting 34

8. Maintenance 35
8.1. Safety Instructions for Maintenance 35
8.2. Preventive Maintenance 35
8.2.1. Basic Cleaning Instructions 36
8.3. Corrective Maintenance 36

9. Deinstallation, Transportation and Storage 37
9.1. Instructions for Deinstallation 37
9.2. Instructions for Transportation 37
9.3. Storage 37

10. Disposal 37

11. Approval 37

1. Introduction

1.1. Before Using the Product

Important
Read and follow the instructions in this user manual before installing, operating or servicing this product.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

After unpacking, check the contents of the box. If any parts are missing or damaged, contact your Highlite International dealer.

Your shipment includes:

- Showtec Cameleon Flood 15 Q4 Tour
- Schuko to Power Pro True1 cable (1,5 m)
- Quick-lock bracket
- User manual

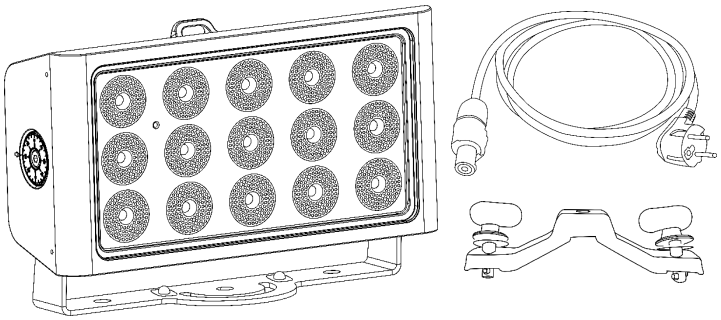


Fig. 01

1.2. Intended Use

This device is intended for professional use as an outdoor wall washer. It is not suitable for households and for general lighting.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.

1.3. Product Lifespan

This device is not designed for permanent operation. Disconnect the device from the electrical power supply when the device is not in operation. This will reduce the wear and will improve the device's lifespan.

1.4. LEDs Lifespan

The light output of the LEDs gradually decreases over time (lumen depreciation). High operating temperatures contribute to this process. You can extend the lifespan of the LEDs by providing adequate ventilation and operating the LEDs at the lowest possible brightness.

1.5. Text Conventions

Throughout the user manual the following text conventions are used:

- Buttons: All buttons are in bold lettering, for example "Press the **UP/DOWN** buttons"
- References: References to chapters and parts of the device are in bold lettering, for example: "Refer to **2. Safety**", "turn the **adjustment handle (05)**"
- 0–255: Defines a range of values
- Notes: **Note:** (in bold lettering) is followed by useful information or tips

1.6. Symbols and Signal Words

Safety notes and warnings are indicated throughout the user manual by safety signs.

Always follow the instructions provided in this user manual.



DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.



Attention Indicates important information for the correct operation and use of the product.



Important Read and observe the instructions in this document.



Electrical hazard



Provides important information about the disposal of this product.

1.7. Symbols on the Information Label

This product is provided with an information label. The information label is located on the mounting bracket of the device.

The information label contains the following symbols:




This device shall not be treated as household waste.

IP65 This device is rated IP65.



This device falls under IEC protection class I.



Minimum distance from lighted objects.

2. Safety



Important
Read and follow the instructions in this user manual before installing, operating or servicing this product.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

2.1. Warnings and Safety Instructions



DANGER
Danger for children

For adult use only. The device must be installed beyond the reach of children.

- Do not leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within children's reach. Packaging material is a potential source of danger for children.



DANGER
Electric shock caused by dangerous voltage inside

There are areas within the device where dangerous touch voltage may be present.

- Do not open the device or remove any covers.
- Do not operate the device if the covers or the housing are open. Before operation, check if the housing is firmly closed and all screws are tightly fastened.
- Disconnect the device from electrical power supply before service and maintenance, and when the device is not in use.



DANGER
Electric shock caused by short-circuit

This device falls under IEC protection class I.

- Make sure that the device is electrically connected to ground (earth). Connect the device only to a socket-outlet with ground (earth) connection.
- Do not cover the ground (earth) connection.
- Do not bypass the thermostatic switch or fuses.
- Do not let the power cable come into contact with other cables. Handle the power cable and all connections with the mains with caution.
- Do not modify, bend, mechanically strain, put pressure on, pull or heat up the power cable.
- Make sure that the power cable is not crimped or damaged. Examine the power cable periodically for any defects.
- Do not immerse the device in water or other liquids. Do not install the device in a location where flooding may occur.
- Do not use the device during thunderstorms. Disconnect the device from the electrical power supply immediately.
- Keep the connectors sealed with the rubber caps when the connectors are not in use.

- Do not connect the cables from above the connectors, if the device is installed outdoors. Make a 'drip loop' in the cable so that rain water cannot enter the device.



WARNING
Risk of epileptic shock

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.



Attention
Power supply

- Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.
- Make sure that the cross-sectional area of the extension cords and power cables is sufficient for the required power consumption of the device.



Attention
General safety

- Do not connect the device to a dimmer pack.
- Do not switch the device on and off in short intervals. This decreases the device's life.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Change the lens or the LEDs if they are visibly damaged to such an extent that their effectiveness is impaired, for example by cracks or deep scratches. Contact your Highlite International dealer for more information, as servicing can be performed only by instructed or skilled persons.
- If the device is dropped or struck, disconnect the device from the electrical power supply immediately.
- If the device is exposed to extreme temperature variations (e.g. after transportation), do not switch it on immediately. Let the device reach room temperature before switching it on, otherwise it may be damaged by the formed condensation.
- If the device fails to work properly, discontinue the use immediately.



Attention
For professional use only
This device shall be used only for the purposes it is designed for.

This device is designed to be used as a professional outdoor wall washer. Any incorrect use may lead to hazardous situations and result in injuries and material damage.

- This device is not suitable for households and for general lighting.
- This device is not designed for permanent operation.
- This device does not contain user-serviceable parts. Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.



Attention
Before each use, examine the device visually for any defects.

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- The safety devices are not damaged.
- There are no deformations on housings, fixations and installation points.
- The lens is not cracked or damaged.
- The power cables are not damaged and do not show any material fatigue.



Attention
Do not expose the device to conditions that exceed the rated IP class conditions.

This device is IP65 rated. IP (Ingress Protection) 65 class means that the device is dust-tight and protected against harmful effect of water jets.

2.2. Requirements for the User

This product may be used by ordinary persons. Maintenance may be carried by ordinary persons. Installation and service shall be carried out only by instructed or skilled persons. Contact your Highlite International dealer for more information.

Instructed persons have been instructed and trained by a skilled person, or are supervised by a skilled person, for specific tasks and work activities associated with the installation, service and maintenance of this product, so that they can identify risks and take precautions to avoid them.


Skilled persons have training or experience, which enables them to recognize risks and to avoid hazards associated with the installation, service and maintenance of this product.

Ordinary persons are all persons other than instructed persons and skilled persons. Ordinary persons include not only users of the product but also any other persons that may have access to the device or who may be in the vicinity of the device.

3. Description of the Device

The Showtec Cameleon Flood 15 Q4 Tour is an IP65-rated outdoor wall washer. It is equipped with 15 4-in-1 RGBW LEDs.


3.1. Front View

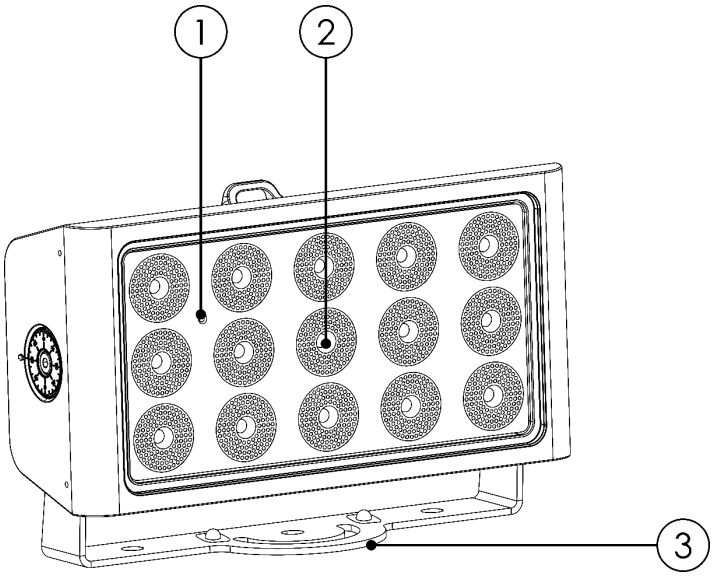

01) Infrared sensor
02) 15 x 5 W RGBW LEDs
03) Mounting bracket

Fig. 02

3.2. Back View

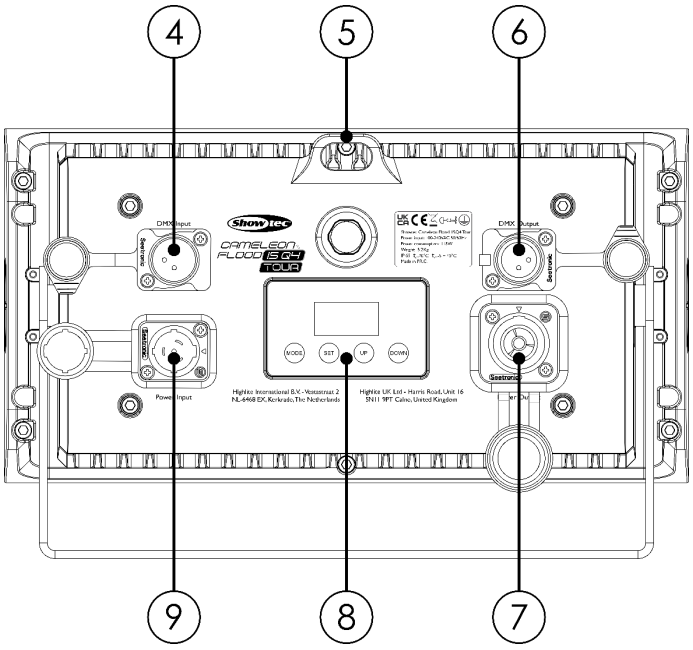

04) IP65-rated 3-pin DMX signal connector IN
05) Safety eye
06) IP65-rated 3-pin DMX signal connector OUT
07) IP65-rated Power Pro True1 connector OUT
08) OLED display and touch buttons
09) IP65-rated Power Pro True1 connector IN

Fig. 03

3.3. Product Specifications

Model:	Cameleon Flood 15 Q4 Tour

Electrical:	
Input voltage:	100–240 V AC, 50/60 Hz
Power consumption:	82 W

Physical:	
Dimensions:	330 x 105 x 210 mm (L x W x H) (including bracket)
Weight:	4,8 kg

Optics:	
Light source:	15 x 5 W RGBW LEDs
Light output:	3434 lm
Dimmer:	0–100 %
Strobe:	0–15 Hz
Beam angle:	40°
CRI:	77
Color temperature:	7200 K
Refresh rate:	4000 Hz

Operation and control:	
Control:	Manual, Auto, Built-in programs, Master/Slave, DMX-512, RDM
DMX channels:	4, 6, 10 channels
Control panel:	OLED display and touch buttons

Connections:	
Power connections:	IP65-rated Power Pro True1 connectors IN/OUT
Data connections:	IP65-rated 3-pin DMX connectors IN/OUT
Signal pinouts:	Pin 1 (earth), pin 2 (-), pin 3 (+)

Construction:	
Housing:	Die-cast aluminum
Color:	Black
IP rating:	IP65
Cooling:	Convection

Thermal:	
Maximum ambient temperature t_a:	40 °C
Maximum housing temperature t_c:	70 °C

Minimum distance:	
Minimum distance from flammable surfaces:	1 m
Minimum distance to lighted object:	0,5 m

3.4. Optional Accessories

You can additionally purchase the following accessories:

Product code: 44002 (Showtec UR-5 Universal IR Remote)

3.5. Dimensions

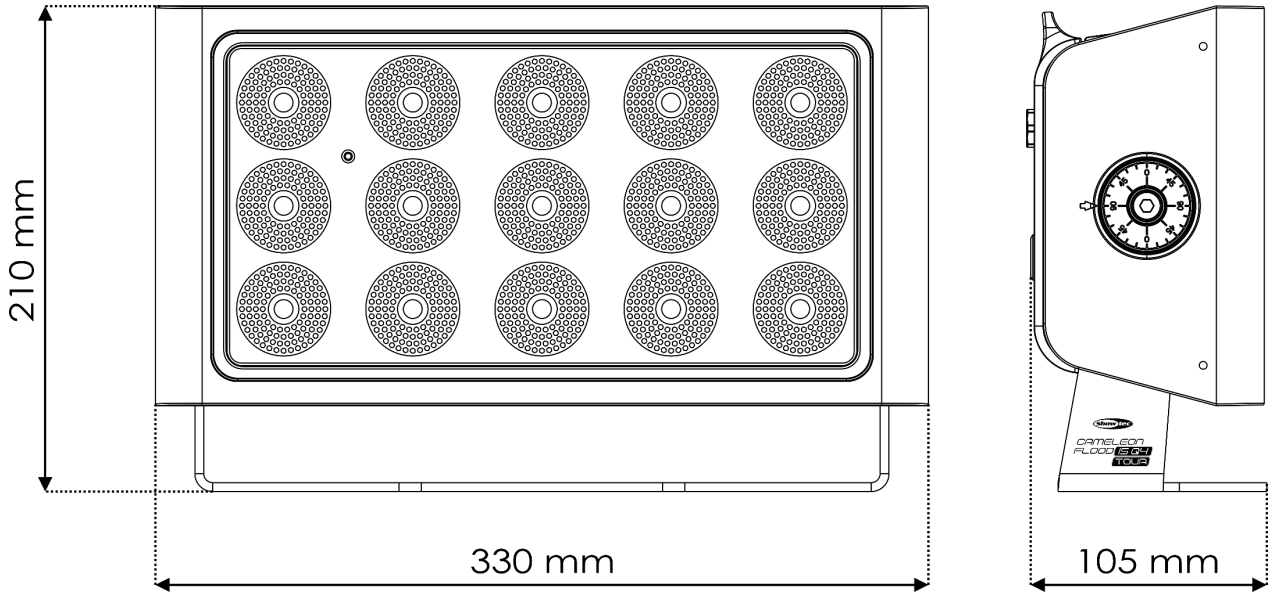


Fig. 04

4. Installation

4.1. Safety Instructions for Installation

WARNING
Incorrect installation can cause serious injuries and damage of property.

If trussing systems are used, installation must be carried out only by instructed or skilled persons.

Follow all applicable European, national and local safety regulations concerning rigging and trussing.

4.2. Personal Protective Equipment

During installation and rigging wear personal protective equipment in compliance with the national and site-specific regulations.

4.3. Installation Site Requirements

- The device can be used outdoors.
- The device can be mounted to a truss or other rigging structure.
- The minimum distance between the light output and the illuminated surface must be bigger than 0,5 m.
- The maximum ambient temperature t_a = 40 °C must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40 °C.

4.4. Rigging

The device can be positioned on a flat surface or mounted to a truss or other rigging structure. Make sure that all loads are within the pre-determined limits of the supporting structure.

CAUTION
Restrict the access under the work area during rigging and/or derigging.

To mount the device, follow the steps below:

01) Use a clamp to attach the device to the supporting structure, as shown in Fig. 05. Make sure that the device cannot move freely. The use of a quick lock bracket is optional.
02) Secure the device with a secondary suspension, for example a safety cable. Make sure that the secondary suspension can hold 10 times the weight of the device. If possible, the secondary suspension should be attached to a supporting structure independent of the primary suspension. Put the safety cable through the **safety eye (05)**, as shown in Fig. 05.

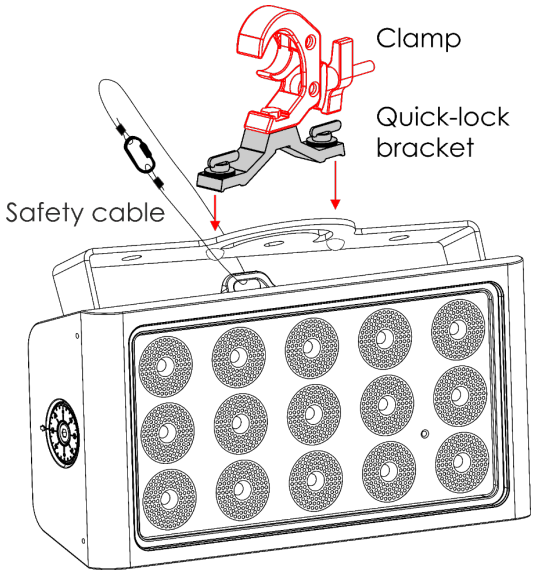


Fig. 05

4.4.1. Angle Adjustment

You can adjust the angle of the device.

Tilt the device to the desired angle (see Fig. 06). The tilt range is <180°.

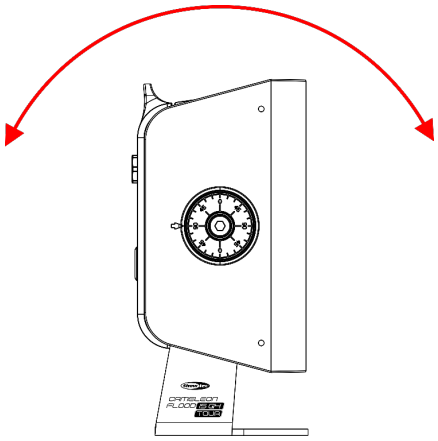


Fig. 06

4.5. Connecting to Power Supply



DANGER
Electric shock caused by short-circuit

The device accepts AC mains power at 100–240 V and 50/60 Hz. Do not supply power at any other voltage or frequency to the device.

This device falls under IEC protection class I. Make sure that the device is always electrically connected to the ground (earth).

Before connecting the device to the socket-outlet:
- Make sure that the power supply matches the input voltage specified on the information label on the device.
- Make sure that the socket-outlet has ground (earth) connection.

Connect the device to the socket-outlet with the power plug. Do not connect the device to a dimmer circuit, as this may damage the device.

This device is IP65 rated.

- Do not expose the device to conditions that exceed the rated IP class conditions.
- Keep the connectors sealed with the rubber caps when the connectors are not in use.
- Do not connect the cables from above the connectors, if the device is installed outdoors. Make a 'drip loop' in the cable so that rain water cannot enter the device.
- Make sure that the cable run is not too heavy. A heavy cable run can cause damage to the connectors. If the connectors are damaged, their ingress protection (IP) can deteriorate.

4.6. Power Linking of Multiple Devices

This device supports power linking. Power can be relayed to another device via the power OUT connector. Note that the input and the output connectors have different designs: one type cannot be connected to the other.

Power linking of multiple devices must be carried out only by instructed or skilled persons.



WARNING
Incorrect power linking may lead to overload of the electrical circuit and result in serious injuries and damage of property.

To prevent overload of the electrical circuit, when power linking multiple devices:

- Use cables with sufficient current-carrying capacity. The power cable supplied with the device is not suitable for power linking of multiple devices.
- Make sure that the total current draw of the device and all connected devices does not exceed the rated capacity of the power cables and the circuit breaker.
- Do not link more devices on one power link than the maximum recommended number.

Maximum recommended number of devices:
- at 100–120 V: 19 devices
- at 200–240 V: 38 devices

5. Setup

5.1. Warnings and Precautions



DANGER
Electric shock caused by short-circuit

This device is IP65 rated.

- Do not expose the device to conditions that exceed the rated IP class conditions.
- Keep the connectors sealed with the rubber caps when the connectors are not in use.
- Do not connect the cables from above the connectors, if the device is installed outdoors. Make a 'drip loop' in the cable so that rain water cannot enter the device.
- Make sure that the cable run is not too heavy. A heavy cable run can cause damage to the connectors. If the connectors are damaged, their ingress protection (IP) can deteriorate.



Attention
Connect all data cables before supplying power.
Disconnect power supply before connecting or disconnecting data cables.

5.2. Stand-alone Setup

When the Cameleon Flood 15 Q4 Tour is not connected to a controller or to other devices, it functions as a stand-alone device.

For more information about the control modes, refer to **6.2. Control Modes** on page 17.

5.3. DMX Connection

5.3.1. DMX-512 Protocol

You need a DMX serial data link to run light shows of one or more devices using a DMX-512 controller or to run synchronized shows of two or more devices set in a master/slave control mode.

The Cameleon Flood 15 Q4 Tour has 3-pin DMX signal IN and OUT connectors.

The pin assignment is as follows: pin 1 (ground), pin 2 (-), pin 3 (+).

Devices on a serial data link must be daisy-chained in a single line. The number of devices that you can control on one data link is limited by the combined number of the DMX channels of the connected devices and the 512 channels available in one DMX universe.

To comply with the TIA-485 standard, no more than 32 devices should be connected on one data link. In order to connect more than 32 devices on one data link, you must use a DMX optically isolated splitter/booster, otherwise this may result in deterioration of the DMX signal.

Note:
- Maximum recommended DMX data link distance: 300 m
- Maximum recommended number of devices on a DMX data link: 32 devices

5.3.2. DMX Cables

Shielded twisted-pair cables with 3-pin XLR connectors must be used for reliable DMX connection. You can purchase DMX cables directly from your Highlite International dealer or make your own cables.

If you use XLR audio cables for DMX data transmission, this may lead to signal degradation and unreliable operation of the DMX network.

When you make your own DMX cables, make sure that you connect the pins and wires correctly as shown in Fig. 07.

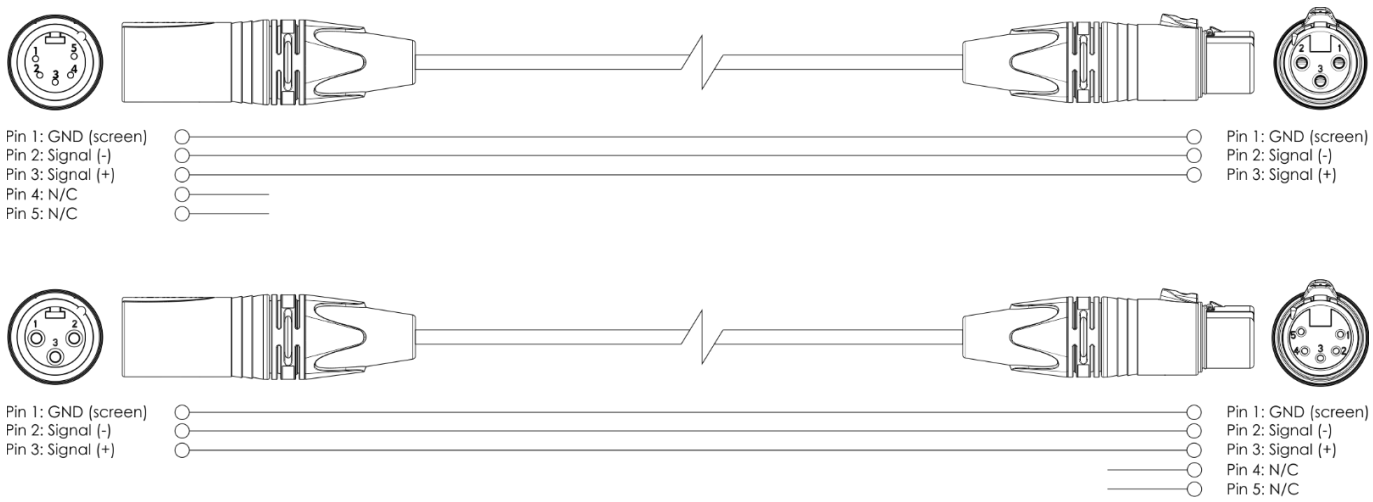


Fig. 07

5.3.3. Master/Slave Setup

The Cameleon Flood 15 Q4 supports master/slave control mode. To connect multiple devices in a master/slave setup, follow the steps below:

01) Connect the first device's DMX OUT connector to the second device's DMX IN connector.
02) Repeat step 1 to connect all devices as shown in Fig. 08.
03) Connect a DMX terminator (120 Ω resistor) to the DMX OUT connector of the last device in the setup.
04) Set the first device on the data link as a master device. See **6.6.5. Master/Slave Mode** on page 24 for more information.
05) Set the remaining devices to slave mode. See **6.6.5. Master/Slave Mode** on page 24 for more information.

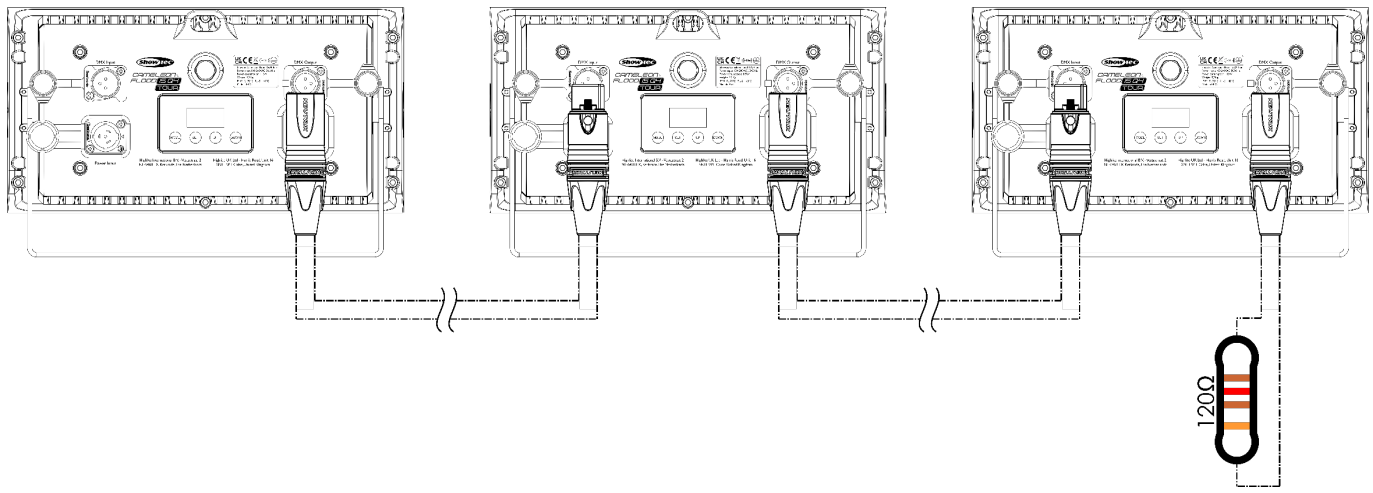


Fig. 08

5.3.4. DMX Linking

To connect multiple devices on one DMX data link, follow the steps below:

06) Use a 3-pin DMX cable to connect the DMX OUT connector of the lighting controller to the DMX IN connector of the first device.
07) Connect the first device's DMX OUT connector to the second device's DMX IN connector with a 3-pin DMX cable.
08) Repeat step 2 to connect all devices in a daisy-chain as shown in Fig. 09.
09) Connect a DMX terminator (120 Ω resistor) to the DMX OUT connector of the last device on the data link.

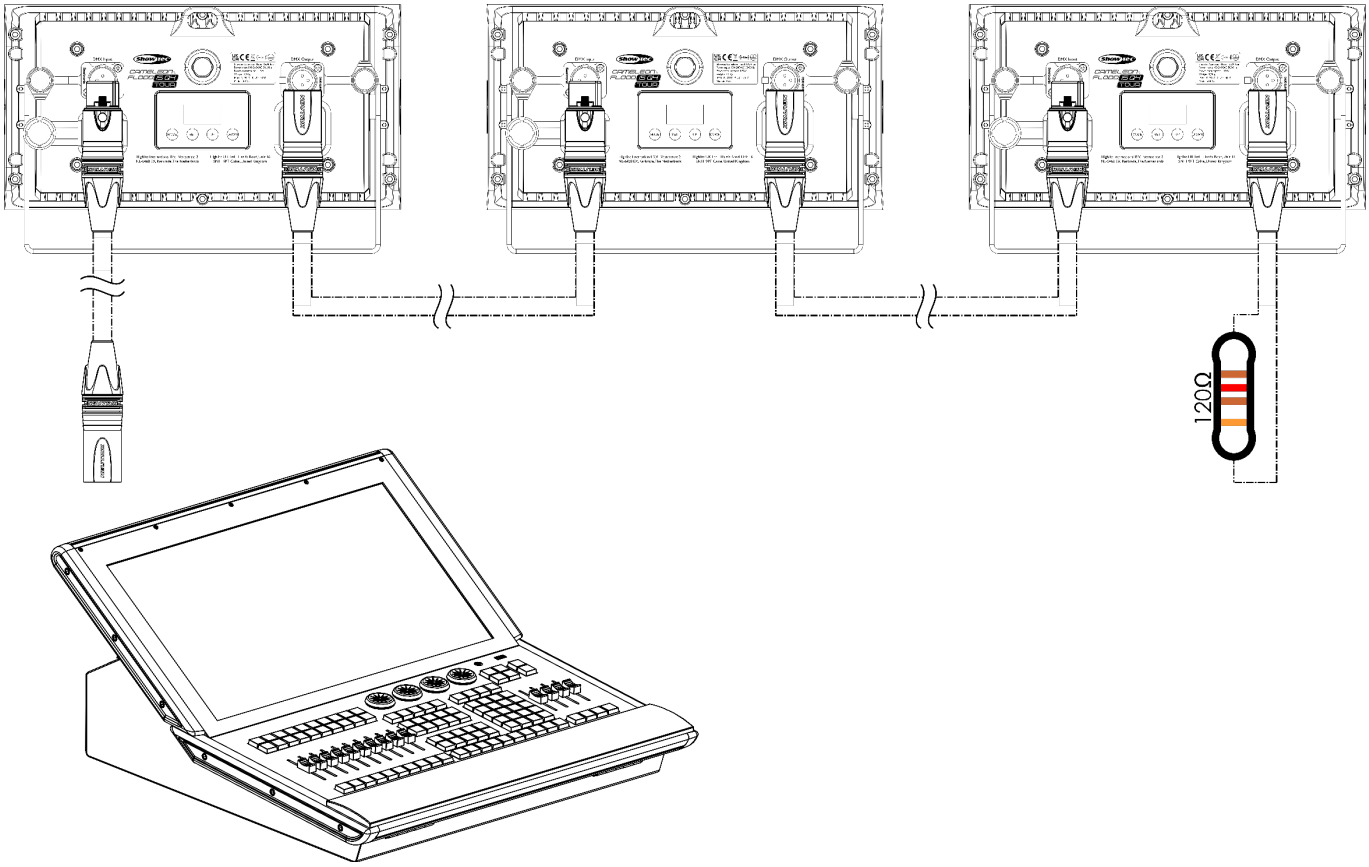


Fig. 09

5.3.5. DMX Addressing

In a setup with multiple devices, make sure that you set the DMX starting address of each device correctly. The Cameleon Flood 15 Q4 Tour has 3 personalities: 4, 6 or 10 channels.

If you want to connect multiple devices on one data link and use them in 10-channel mode, for example, follow the steps below:

01) Set the starting address of the 1st device on the data link to 1 (001).
02) Set the starting address of the 2nd device on the data link to 11 (011), as 1 + 10 = 11.
03) Set the starting address of the 3rd device on the data link to 21 (021), as 11 + 10 = 21.
04) Continue assigning the starting addresses of the remaining devices by adding each time 10 to the previous number.

Make sure that you do not have any overlapping channels in order to control the Cameleon Flood 15 Q4 Tour correctly. If two or more devices are addressed similarly, they will work similarly.

6. Operation

6.1. Safety Instructions for Operation



Attention
This device must be used only for the purposes it is designed for.

This device is intended for professional use as an outdoor wall washer. It is not suitable for households and for general lighting.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.



Attention
Power supply

Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.

6.2. Control Modes

The Cameleon Flood 15 Q4 Tour can be operated with a DMX controller, or without a DMX controller as a stand-alone device or in a master/slave setup.

The Cameleon Flood 15 Q4 Tour supports the following control modes:

- Stand-alone: Manual, Auto, Built-in programs
- Master/Slave: Manual, Auto, Built-in programs
- DMX-512, RDM 4, 6, 10 channels

For more information about how to connect the devices, refer to **5. Setup** on pages 14–16.

To operate the device manually as a stand-alone device or in a master/slave setup:

- Adjust the colors in Manual menu. See **6.6.2. Manual Mode** on page 22 for more information.

To run the built-in programs without a DMX controller:

01) Select one of the 16 built-in programs in Program menu. See **6.6.4. Program** on page 23 for more information. Adjust the program speed and strobe frequency.
02) Run all built-in programs in a sequence in Auto menu. See **6.6.3. Auto** on page 23 for more information.


To run the preset colors without a DMX controller:

01) Select one of the 33 preset colors in Program menu. See **6.6.4.1. Program 01** on page 24 for more information.

To operate the device with a DMX controller:

01) Set the DMX starting address of the device in Address menu. See **5.3.5. DMX Addressing** on page 16 and **6.6.1.1. Address** on page 22.
02) Select the DMX channel mode. See **6.6.1.2. Channels** on page 22 for more information. See **6.7. DMX Channels** on pages 28–29 for complete overview of all DMX channels.

6.3. Control Panel

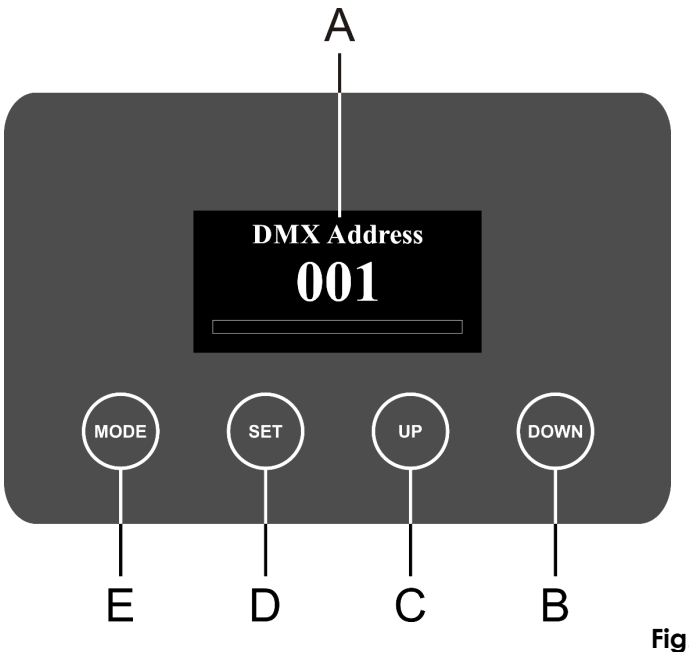

A) OLED display
B) DOWN button
C) UP button
D) SET button
E) MODE button

Fig. 10

- Use the **MODE** button to exit the current submenu and to return to the Main Menu.
- Use the **UP/DOWN** buttons to navigate through the menus or to increase/decrease numeric values.
- Use the **SET** button to open the desired menu, to confirm your choice or to set the currently selected value.

6.4. Start-up


Upon start-up the display will briefly show its software version and current temperature.


Note:

If no button is touched after 30 seconds of inactivity, the display will show the start screen: Touch any button to return to the main menu.

By default the display is locked. To access the main menu, you need to enter the **password**. Touch and hold the **MODE** and **SET** buttons for 3 seconds to unlock the display. See **6.6.6.5. Key Lock** on page 27 for more information.


6.5. Menu Overview

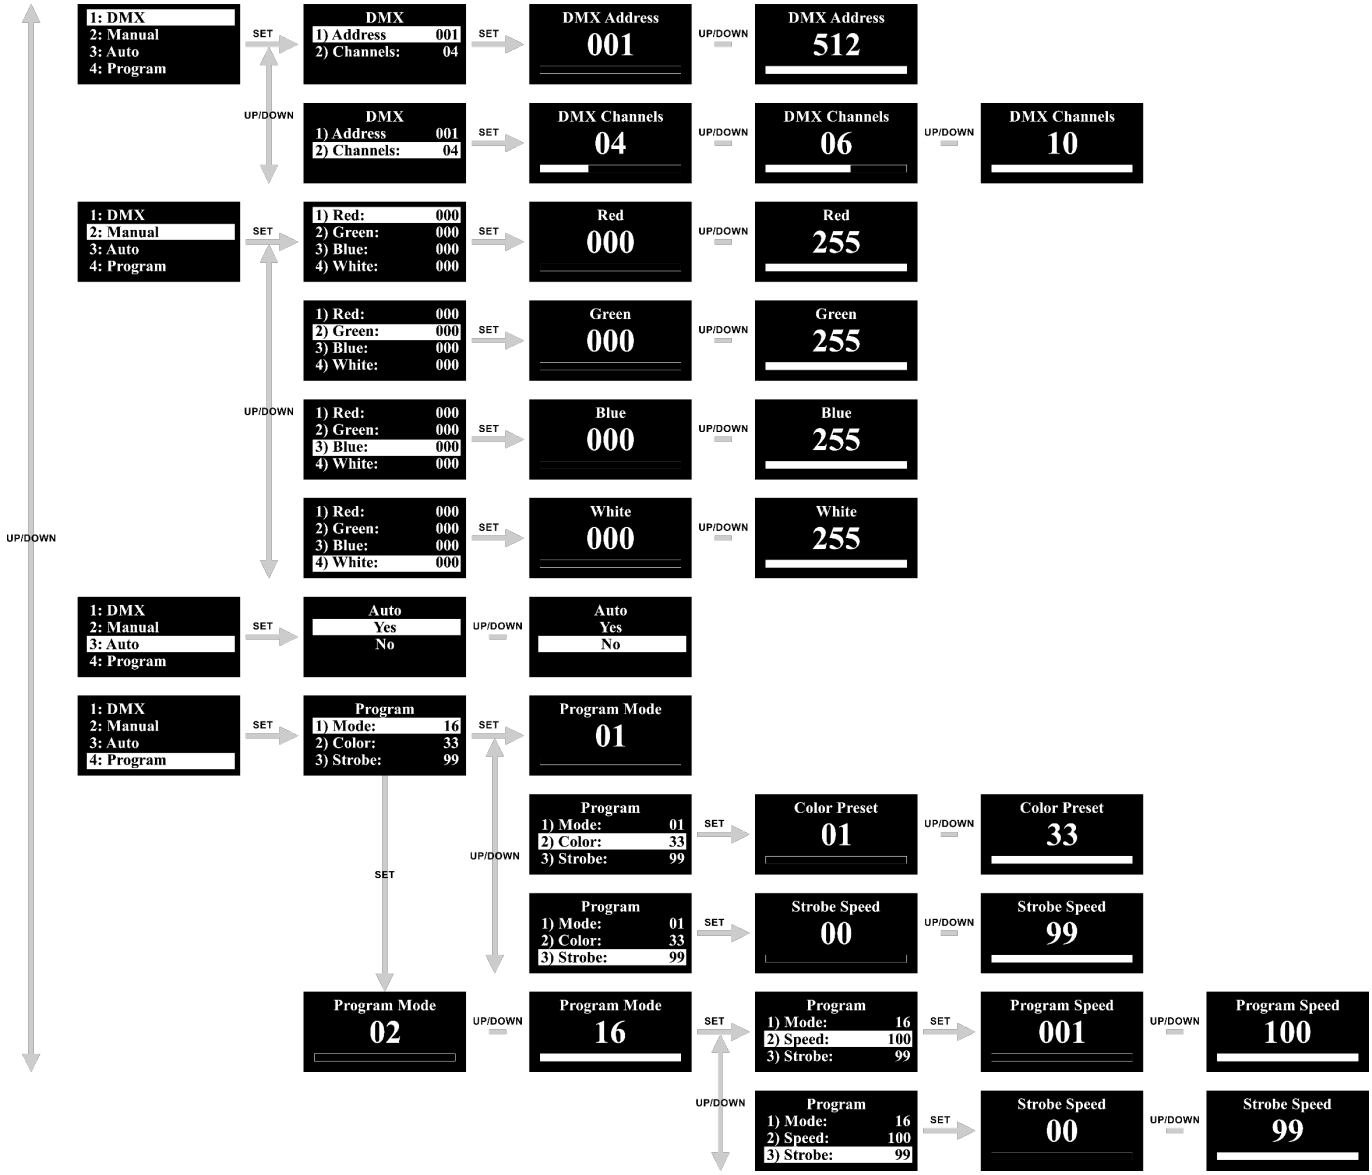

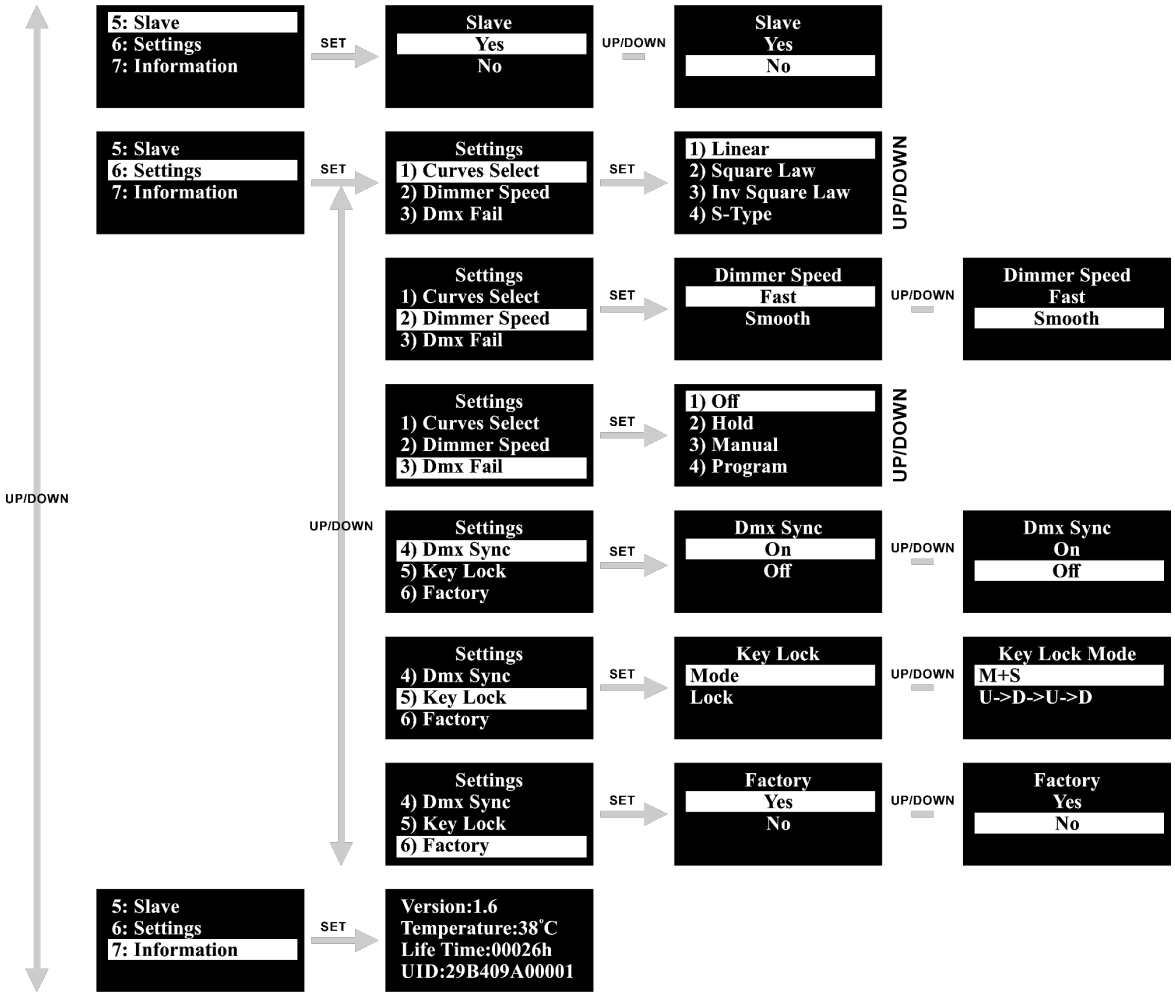

5: Slave
6: Settings
7: Information
SET
Slave
Yes
No
UP/DOWN
Slave
Yes
No
Settings
1) Curves Select
2) Dimmer Speed
3) Dmx Fail
1) Linear
2) Square Law
3) Inv Square Law
4) S-Type
Dimmer Speed
Fast
Smooth
1) Off
2) Hold
3) Manual
4) Program
Settings
4) Dmx Sync
5) Key Lock
6) Factory
Dmx Sync
On
Off
Key Lock
Mode
Lock
Key Lock Mode
M+S
U->D->U->D
Factory
Yes
No
Version:1.6
Temperature:38°C
Life Time:00026h
UID:29B409A00001

6.6. Main Menu Options

Upon start-up, the display will show the current software version and the temperature.

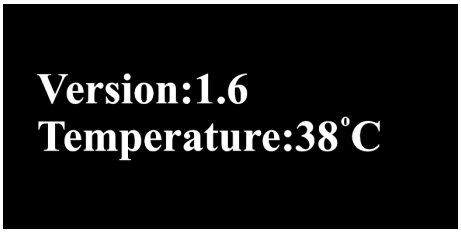

The main menu has the following options:

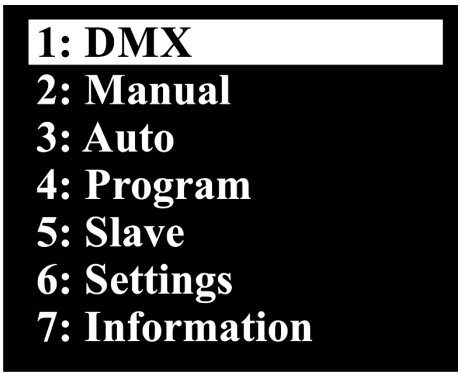

- Touch the **UP/DOWN** buttons to navigate through the main menu.
- Touch the **SET** button to open the submenus.

Note: By default the display is locked. To access the main menu, you need to enter the **password**. Press and hold down the **MODE** and **SET** buttons for 3 seconds to unlock the display. See **6.6.6.5 Lock** on page 27 for more information.

6.6.1. DMX Settings

In this menu you can set the DMX address and choose the desired DMX channel mode.

01) While in the main menu, touch the **UP/DOWN** buttons to choose DMX.
02) Touch the **SET** button to enter the menu. The display will show:



03) Touch the **UP/DOWN** buttons to select one of the 2 submenus:
    - ADDRESS
    - CHANNELS
04) Touch the **SET** button to open the desired submenu.

6.6.1.1. Address

In this menu you can set the desired DMX starting address.



01) Touch the **UP**/**DOWN** buttons to set the desired DMX address. The adjustment range is 001–512.
02) Touch the **SET** button to confirm your choice.

6.6.1.2. Channels

In this menu you can set the desired DMX channel mode.



01) Touch the **UP**/**DOWN** buttons to set the desired DMX channel mode. Choose one of the 3 options:
    - 4 channels
    - 6 channels
    - 10 channels
02) Touch the **SET** button to confirm your choice.

6.6.2. Manual Mode

In this menu you can manually set the desired colors.

01) While in the main menu, touch the **UP**/**DOWN** buttons to choose MANUAL.
02) Touch the **SET** button to enter the menu. The display will show:




03) Touch the **UP**/**DOWN** buttons to choose one of the 4 colors: Red, Green, Blue and White.
04) Touch the **SET** button to enter the menu.
05) Touch the **UP**/**DOWN** buttons to set the LED brightness. The adjustment range for each color is 0–255, from dark to brightest.
06) Touch the **SET** button to save your settings. You can combine Red, Green, Blue and White to create an infinite range of colors (0–255).

6.6.3. Auto

In this menu you can set Auto mode.

01) While in the main menu, touch the **UP/DOWN** buttons to choose AUTO.
02) Touch the **SET** button to enter the menu. The display will show:

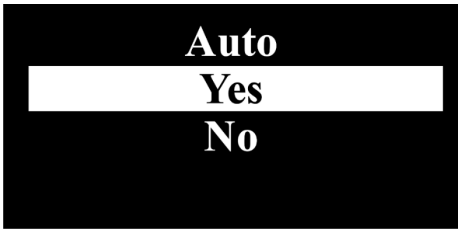


03) Touch the **UP/DOWN** buttons to choose YES (to start the auto show) or NO (to return to the previous screen.
04) Touch the **SET** button to confirm your choice.


6.6.4. Program

In this menu you can set the built-in programs and color presets.

01) While in the main menu, touch the **UP/DOWN** buttons to choose PROGRAM.
02) Touch the **SET** button to enter the menu. The display will show:

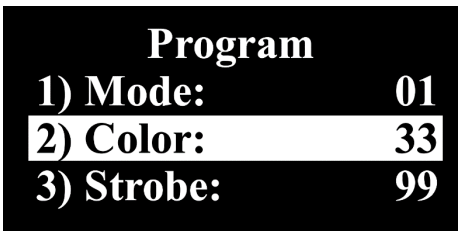


03) Touch the **UP/DOWN** buttons to choose MODE and touch the **SET** button to enter the menu. The display will show:

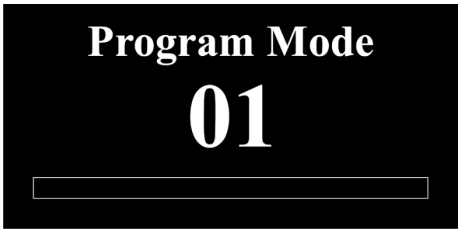

04) Touch the **UP/DOWN** buttons to choose one of the 16 built-in programs. Touch the **SET** button to confirm your choice.

6.6.4.1. Program 01


01) If you choose program 01, the display will show:

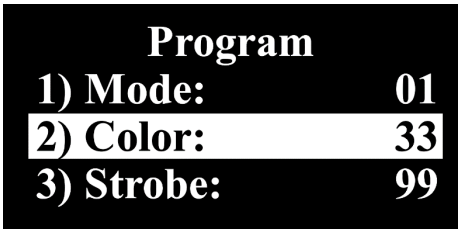

02) Touch the **UP**/**DOWN** buttons to choose one of the 2 options:
    - COLOR
    - STROBE
03) Touch the **SET** button to enter the desired menu.
04) If you chose COLOR, touch the **UP**/**DOWN** buttons to choose one of the 33 color macros. Touch the **SET** button to save your settings.
05) If you chose STROBE, touch the **UP**/**DOWN** buttons to set the strobe frequency. The adjustment range is between 0–99, from OFF to high frequency. Touch the **SET** button to save your settings.

6.6.4.2. Programs 02–16

01) If you choose one of the programs 02–16, the display will show:

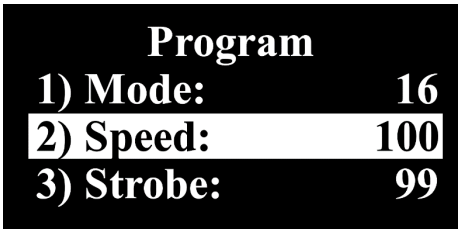


02) Touch the **UP**/**DOWN** buttons to choose one of the 2 options:
    - SPEED
    - STROBE
03) Touch the **SET** button to enter the desired menu.
04) If you chose SPEED, touch the **UP**/**DOWN** buttons to set the built-in program's speed. The adjustment range is 1–100, from slow to fast. Touch the **SET** button to save your settings.
05) If you chose STROBE, touch the **UP**/**DOWN** buttons to set the strobe frequency. The adjustment range is 0–99, from OFF to high frequency. Touch the **SET** button to save your settings.

6.6.5. Master/Slave Mode

In this menu you can set the device as a slave.

01) While in the main menu, touch the **UP**/**DOWN** buttons to choose SLAVE.
02) Touch the **SET** button to enter the menu. The display will show:

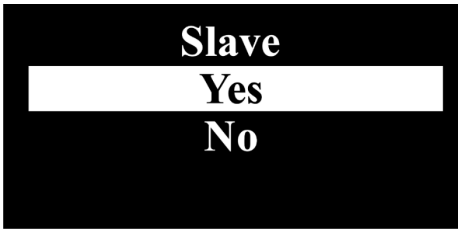


03) Touch the **UP**/**DOWN** buttons to choose YES or NO.
04) Touch the **SET** button to confirm your choice.
05) If you have chosen YES, the device will be set as a slave and will react the same as the master device.

6.6.6. Settings

In this menu you can adjust the device's settings.

01) While in the main menu, touch the **UP/DOWN** buttons to choose SETTINGS.
02) Touch the **SET** button to enter the menu. The display will show:

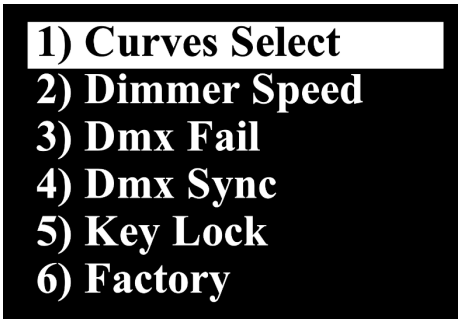


03) Touch the **UP/DOWN** buttons to choose one of the 6 submenus:
- CURVES SELECT
- DIMMER SPEED
- DMX FAIL
- DMX SYNC
- KEY LOCK
- FACTORY


04) Touch the **SET** button to enter the desired submenu.


6.6.6.1. Curves Select


In this menu you can set the dimming curves.

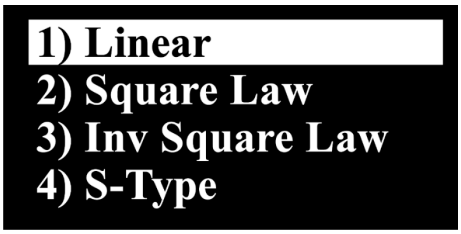


01) Touch the **UP/DOWN** buttons to choose one of the 4 dimming curves.
02) Touch the **SET** button to confirm your choice.

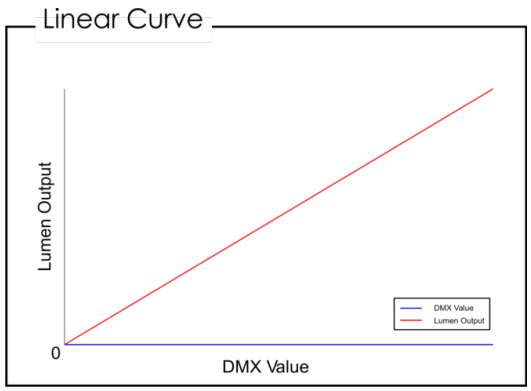

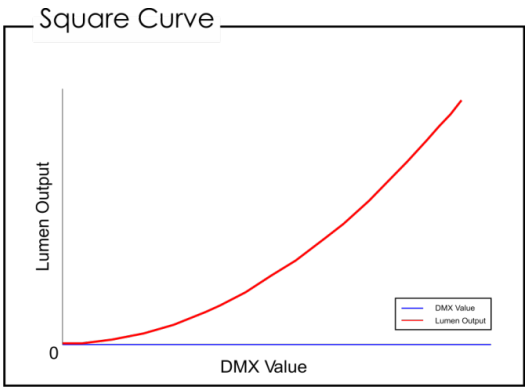


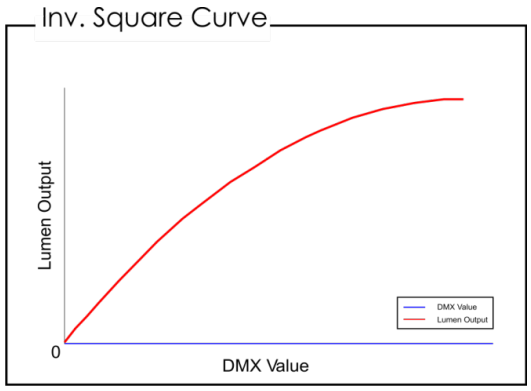

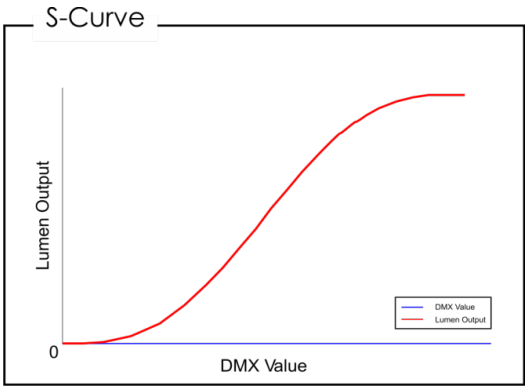

6.6.6.2. Dimmer Speed


In this menu you can set the dimmer speed.

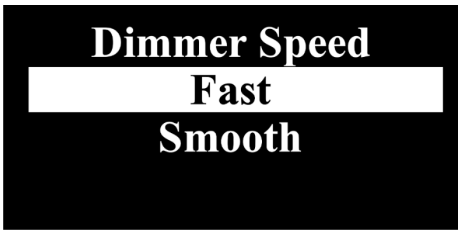

01) Touch the **UP/DOWN** buttons to select FAST or SMOOTH.
02) Touch the **SET** button to confirm your choice.

6.6.6.3. DMX Fail


In this menu you can set the device's behavior in case of a DMX failure.

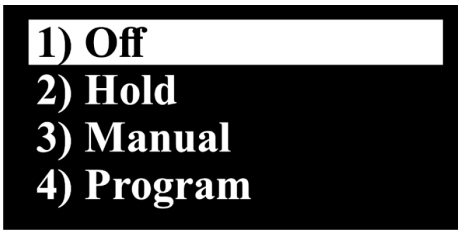

01) Touch the **UP/DOWN** buttons to select one of the 4 options:
    - OFF: the device will black out the light output
    - HOLD: the device will use last properly received DMX signal, ensuring undisrupted performance
    - MANUAL: the device will switch to Manual mode
    - PROGRAM: the device will run the built-in programs
02) Touch the **SET** button to confirm your choice.

6.6.6.4. DMX Sync


In this menu you can set the devices' behavior, while using multiple Cameleons.

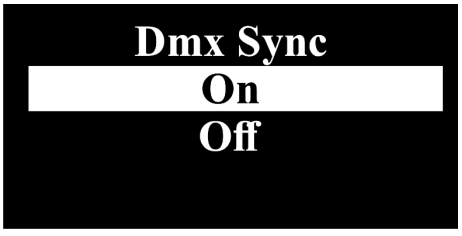

01) Touch the **UP/DOWN** buttons to select ON (all Cameleons will simultaneously perform the same action, without any delays) or OFF (risk of random delays).
02) Touch the **SET** button to confirm your choice.

6.6.6.5. Key Lock

In this menu you can select the Key Lock Mode and Lock functions. These functions restrict access to the main menu.

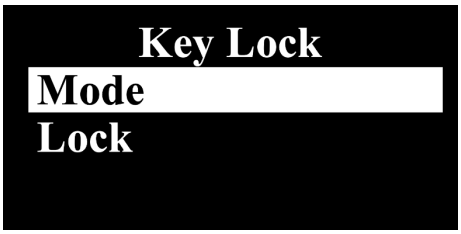

01) While in the Settings menu, touch the **UP/DOWN** buttons to select Key Lock.
02) Touch the **SET** button to open the submenu.
03) Touch the **UP/DOWN** buttons to select Mode or Lock.
04) If you select Mode, touch the **SET** button to open the Mode submenu.
05) Touch the **UP/DOWN** buttons to select M+S or U->D->U->D and confirm it with the **SET** button. If you select M+S, touch the **MODE** and **SET** buttons simultaneously for 3 seconds to unlock the device. If you select U->D->U->D, touch the buttons **UP/DOWN/UP/DOWN** to unlock the device.
06) If you select Lock, touch the **SET** button to open the Lock submenu.
07) Touch the **UP/DOWN** buttons to select On and Off and confirm it with the **SET** button. If you select On, the device enters Lock mode after 35 seconds. To unlock it, enter the password set in Key Lock Mode (see Step 5 for more information). If you select Off, the main menu stays unlocked. When the device is unlocked, touch **MODE** and **SET** simultaneously to lock the device.

6.6.6.6. Factory

In this menu you can restore the default factory settings.



01) Touch the **UP/DOWN** buttons to select YES or NO.
02) Touch the **SET** button to confirm your choice.

6.6.7. Information

In this menu you can view the device's current software version, temperature, total lifetime and the UID (device's RDM code).

01) While in the main menu, touch the **UP/DOWN** buttons to choose INFORMATION.
02) Touch the **SET** button to enter the menu. The display will show:



The device's RDM code is: 29B409A00001.

6.7. DMX Channels

6.7.1. 4 Channels, 6 Channels, 10 Channels

4 CH	6 CH	10 CH	Function	Value	Setting
	1	1	**Master Dimmer**	000–255	From low to high intensity (0–100 %)
	2	2	**Linear Strobe**	000–010	No function
				011–255	From low to high frequency (0–15 Hz)
		3	**Pulse Strobe**	000–010	No function
				011–255	From low to high frequency (0–15 Hz)
1	3		**Red**	000–255	From low to high intensity (0–100 %)
2	4		**Green**	000–255	From low to high intensity (0–100 %)
3	5		**Blue**	000–255	From low to high intensity (0–100 %)
4	6		**White**	000–255	From low to high intensity (0–100 %)
		4	**Color Presets**	000–007	No function
				008–013	Color 1 R 255; G 000; B 000; W 000
				014–020	Color 2 R 255; G 000; B 000; W 100
				021–027	Color 3 R 255; G 000; B 000; W 200
				028–034	Color 4 R 255; G 050; B 000; W 000
				035–041	Color 5 R 255; G 150; B 000; W 000
				042–048	Color 6 R 255; G 255; B 000; W 000
				049–055	Color 7 R 255; G 255; B 000; W 075
				056–062	Color 8 R 000; G 255; B 000; W 255
				063–069	Color 9 R 000; G 255; B 000; W 150
				070–076	Color 10 R 000; G 255; B 000; W 050
				077–083	Color 11 R 000; G 255; B 000; W 000
				084–090	Color 12 R 000; G 255; B 050; W 000
				091–097	Color 13 R 000; G 255; B 150; W 000
				098–104	Color 14 R 000; G 255; B 255; W 000
				105–111	Color 15 R 000; G 255; B 255; W 075
				112–118	Color 16 R 000; G 255; B 255; W 150
				119–125	Color 17 R 000; G 100; B 255; W 255
				126–132	Color 18 R 000; G 000; B 255; W 100
				133–139	Color 19 R 000; G 000; B 255; W 050
				140–146	Color 20 R 000; G 000; B 255; W 000
				147–153	Color 21 R 075; G 000; B 255; W 000
				154–160	Color 22 R 160; G 000; B 255; W 000
				161–167	Color 23 R 255; G 000; B 255; W 000
				168–174	Color 24 R 255; G 000; B 175; W 000
				175–181	Color 25 R 255; G 000; B 100; W 000
				182–188	Color 26 R 255; G 000; B 100; W 050
				189–195	Color 27 R 255; G 000; B 025; W 050
				196–202	Color 28 R 255; G 000; B 025; W 025
				203–209	Color 29 R 255; G 000; B 025; W 000
				210–216	Color 30 R 000; G 000; B 000; W 255
				217–223	Color 31 R 075; G 075; B 000; W 255
				224–230	Color 32 R 000; G 000; B 100; W 255
				231–255	Color 33 R 255; G 255; B 255; W 255
		5	**Built-in Programs**	000–015	No function
				016–031	Program 1
				032–047	Program 2
				048–063	Program 3
				064–079	Program 4
				080–095	Program 5
				096–111	Program 6

4 CH	6 CH	10 CH	Function	Value	Setting
				112–127	Program 7
				128–143	Program 8
				144–159	Program 9
				160–175	Program 10
				176–191	Program 11
				192–207	Program 12
				208–223	Program 13
				224–239	Program 14
				240–255	Program 15
		6	**Program Speed**	000–255	Speed adjustment, from slow to fast
		7	**Red**	000–255	From low to high intensity (0–100 %)
		8	**Green**	000–255	From low to high intensity (0–100 %)
		9	**Blue**	000–255	From low to high intensity (0–100 %)
		10	**White**	000–255	From low to high intensity (0–100 %)

Note: Make sure that Master Dimmer channel is open, to see the light output.

Note: Make sure that Color Presets or Built-in Programs or Red, Green, Blue or White channels are open, if you want to use Linear or Pulse Strobe channels.

Note: Make sure that Color Presets and Built-in Programs channels are closed, if you want to use Red, Green, Blue and White channels.

Note: Make sure that Built-in Programs channel is closed, if you want to use Color Presets channel.

Note: Make sure that Built-in Programs channel is open, if you want to use Program Speed channel.

6.8. Supported RDM PIDs (Parameter IDs)

Parameter ID	Discovery command	SET command	GET command
DISC_UNIQUE_BRANCH	*		
DISC_MUTE	*		
DISC_UN_MUTE	*		
DEVICE_INFO			*
SOFTWARE_VERSION_LABEL			*
DMX_START_ADDRESS		*	*
IDENTIFY_DEVICE		*	*
SUPPORTED_PARAMETERS			*
SENSOR_DEFINITION			*
SENSOR_VALUE			*
DMX_PERSONALITY		*	*
DMX_PERSONALITY_DESCRIPTION			*
RESET_DEVICE		*	

6.9. Remote Control

The device can be controlled with an IR remote control (44002).

DANGER
Do not ingest battery, chemical burn hazard

The remote control contains a coin cell battery. If the coin cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

The battery is already installed in the remote control. It is protected against discharge by a transparent plastic foil. Remove the plastic foil before using the remote control for the first time.

When replacing the battery, make sure that the polarity is correct. Incorrect polarity may damage the remote control.

You can control several devices at the same time with the remote control. Make sure that you point the remote control to the **infrared sensor (01)** of the device or group of devices that you want to control, as shown in Fig. 11. If you point the remote control to the **infrared sensor (01)** of the device outside of the range of the sensor, the device will not respond to the remote control (Fig. 12).

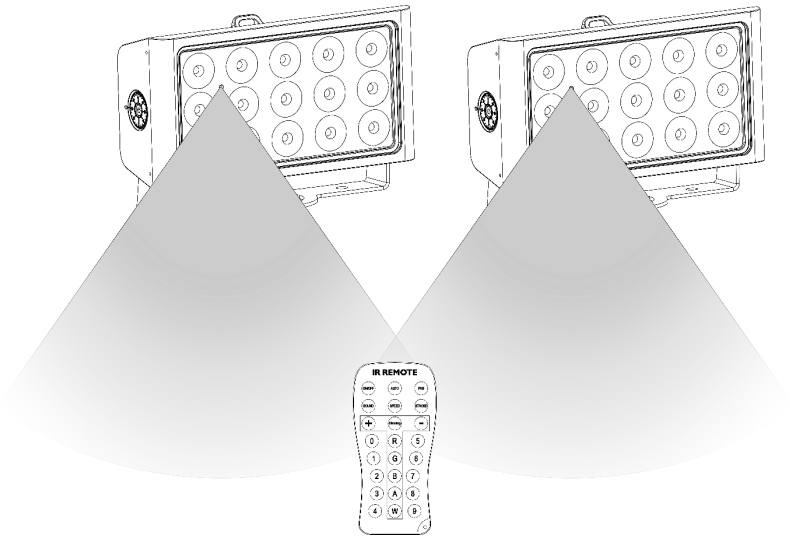


Fig. 11

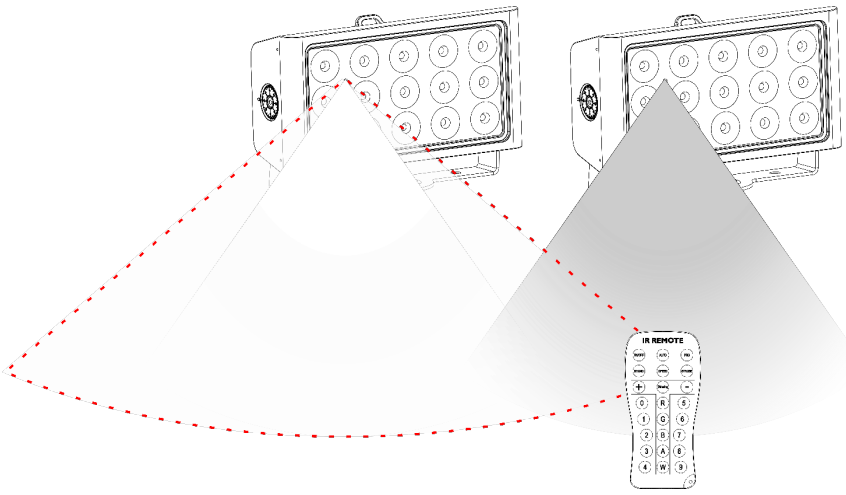


Fig. 12

To operate the device with the IR remote control, point the remote control to the **infrared sensor (01)**.

The remote control will work only if the device is already operating in Auto, Built-in Programs or Manual mode.

The remote control has the following functions:

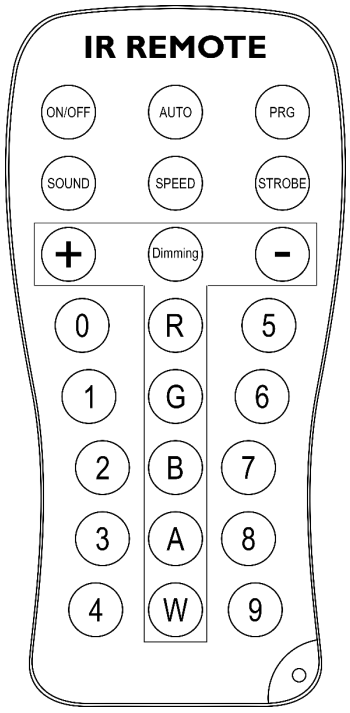


Fig. 13

Note:

- When you turn off the device, the next time you turn it on, it will continue to operate in the previously selected operation mode.

Button	Function	Description
ON/OFF	On/Off	Turns the LEDs on/off
AUTO	Auto	Activates Auto mode
PRG	Program	Activates Built-in Programs mode
SOUND	No function	
SPEED	Speed	Activates program speed adjustment
STROBE	Strobe	Activates strobe frequency adjustment
Dimming	Dimming	Activates Manual mode
+	Plus	Increase value
-	Minus	Decrease value
R	Red	Activates Red LEDs

Button	Function	Description
G	Green	Activates Green LEDs
B	Blue	Activates Blue LEDs
A	No function	
W	White	Activates White LEDs
0	Color 14	Activates color 14 (R 000; G 255; B 255; W 000)
1	Color 22	Activates color 22 (R 160; G 000; B 255; W 000)
2	Color 23	Activates color 23 (R 255; G 000; B 255; W 000)
3	Color 4	Activates color 4 (R 255; G 050; B 000; W 000)
4	Color 33	Activates color 33 (R 255; G 255; B 255; W 255)
5	Color 25	Activates color 25 (R 255; G 000; B 100; W 000)
6	Color 8	Activates color 8 (R 000; G 255; B 000; W 255)
7	Color 18	Activates color 18 (R 000; G 000; B 255; W 100)
8	Color 6	Activates color 6 (R 255; G 255; B 000; W 000)
9	Color 31	Activates color 31 (R 075; G 075; B 000; W 255)

6.9.1. Auto

Press the AUTO button to activate Auto mode. The device will run its built-in programs in a sequence.

6.9.2. Built-in Programs

03) Press the PRG button to activate Built-in Programs mode.

04) Press the + and - buttons to select one of the 16 built-in programs.

6.9.2.1. Color Presets

01) Press the 0 – 9 buttons to select the color presets.

02) Press the + and - buttons to select one of the 33 color presets.

6.9.2.2. Strobe

01) Press the STROBE button to set the strobe frequency.

02) Press the + and - buttons to increase/decrease the strobe frequency. The adjustment range is 0–99, from OFF to high strobe frequency.

6.9.2.3. Program Speed

01) Press the SPEED button to set the program speed.
02) Press the + and - buttons to increase/decrease the program speed. The adjustment range is 1–100, from slow to fast.

Note:
If you select program 1 and start adjusting the program speed, the device will automatically switch to program 2. It is because the program speed function is available only in programs 2–16. The device searches for and activates the first following program that has the program speed function.

6.9.3. Manual

01) Press the Dimming button to activate Manual mode.
02) Press the R, G, B or W button to choose one of the RGBW colors.
03) Press the + and - buttons to set the LED brightness of the selected color. The adjustment range is 0–255. You can combine Red, Green, Blue and White to create an infinite range of colors.

7. Troubleshooting

This troubleshooting guide contains solutions to problems which can be carried out by an ordinary person. The device does not contain user-serviceable parts.

Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.

Refer servicing to instructed or skilled persons. Contact your Highlite International dealer in case the solution is not described in the table.

Problem	Probable cause(s)	Solution
The device does not function at all	No power to the device	• Check if power is switched on and cables are plugged in
	Internal fuse is blown	• Disconnect the device and contact your Highlite International dealer
The device responds erratically	The factory settings of the device are changed	• Reset the device's parameters to the default factory settings. See **6.6.6.6. Factory** on page 27
The device does not respond to DMX control	The controller is not connected	• Connect the controller
	The signal is reversed. The 3-pin DMX OUT of the controller does not match the DMX IN of the device	• Install a phase-reversing cable between the controller and the device
	The controller is defective	• Try using another controller
The device responds erratically to DMX control	Bad data link connection	• Examine connections and cables. Correct poor connections. Repair or replace damaged cables
	The data link is not terminated with a 120 Ω termination plug	• Insert a termination plug in the DMX OUT connector of the last device on the link
	Incorrect addressing	• Check address settings and correct, if necessary
	In case of a setup with multiple devices, one of the devices is defective and disturbs data transmission on the link	• To find out the defective device, bypass one device at a time until normal operation is restored
The device does not respond to the remote control	The remote control is outside of the range of the sensor of the infrared port	• Walk closer to the device or change the angle at which you point the remote control to the device. See **6.9. Remote Control** on page 30
	The battery of the remote control is depleted	• Change the battery of the remote control
No light or LEDs cut out intermittently	LEDs are damaged	• Disconnect the device and contact your Highlite International dealer
	The power supply settings do not match local AC voltage and frequency	• Disconnect the device. Check the settings and correct, if necessary

8. Maintenance

8.1. Safety Instructions for Maintenance



DANGER
Electric shock caused by dangerous voltage inside

Disconnect power supply before servicing or cleaning.



WARNING
Risk of burns due to hot surface

Allow the device to cool down for at least 15 minutes before servicing or cleaning.

8.2. Preventive Maintenance



Attention
Before each use, examine the device visually for any defects.

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- The safety devices are not damaged.
- There are no deformations on housings, fixations and installation points.
- The lens is not cracked or damaged.
- The power cables are not damaged and do not show any material fatigue.

8.2.1. Basic Cleaning Instructions

The external lens of the device must be cleaned periodically in order to optimize the light output. The cleaning schedule depends on the conditions at the site where the device is installed. When smoke or fog machines are used at the site, the device will need more frequent cleaning. On the other hand, if the device is installed in well-ventilated area, it will need less frequent cleaning. To establish a cleaning schedule, examine the device at regular intervals during the first 100 hours of operation.

To clean the device, follow the steps below:

01) Disconnect the device from the electrical power supply.
02) Allow the device to cool down for at least 15 minutes.
03) Remove the dust collected on the external surface with dry compressed air and a soft brush.
04) Clean the lens with a damp cloth. Use a mild detergent solution.
05) Dry the lens carefully with a lint-free cloth.
06) Clean the DMX and other connections with a damp cloth.



Attention

- Do not immerse the device in liquid.
- Do not use alcohol or solvents.
- Make sure that the connections are fully dry before connecting the device to the power supply and to other devices.

8.3. Corrective Maintenance

The device does not contain user-serviceable parts. Do not open the device and do not modify the device.

Refer repairs and servicing to instructed or skilled persons. Contact your Highlite International dealer for more information.

9. Deinstallation, Transportation and Storage

9.1. Instructions for Deinstallation

WARNING
Incorrect deinstallation can cause serious injuries and damage of property.

- Let the device cool down before dismounting.
- Disconnect power supply before deinstallation.
- Always observe the national and site-specific regulations during deinstallation and derigging of the device.
- Wear personal protective equipment in compliance with the national and site-specific regulations.


9.2. Instructions for Transportation

- Use the original packaging to transport the device, if possible.
- Always observe the handling instructions printed on the outer carton box, for example: "Handle with care", "This side up", "Fragile".

9.3. Storage

- Clean the device before storing. Follow the cleaning instructions in chapter **8.2.1. Basic Cleaning Instructions** on page 36.
- Store the device in the original packaging, if possible.

10. Disposal

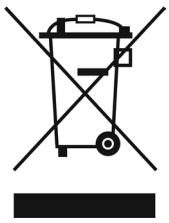

Correct disposal of this product

Waste Electrical and Electronic Equipment

This symbol on the product, its packaging or documents indicates that the product shall not be treated as household waste. Dispose of this product by handing it to the respective collection point for recycling of electrical and electronic equipment. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. For more detailed information about recycling of this product contact the local authorities or the authorized dealer.

11. Approval

CE

UK CA

Check the respective product page on the website of Highlite International (www.highlite.com) for an available declaration of conformity.

©2026 Showtec