


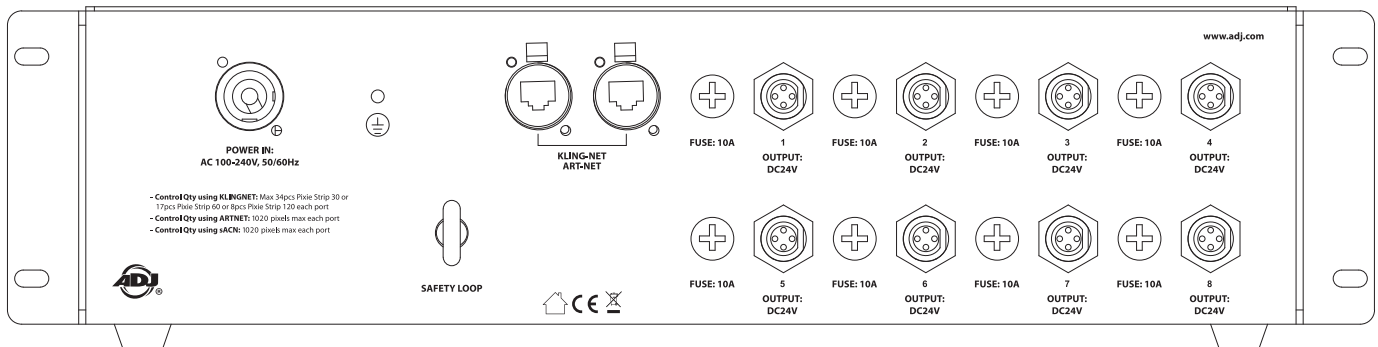

PIXIE DRIVER 8000 V2

User Manual

©2026 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

ADJ PRODUCTS LLC World Headquarters

6122 S. Eastern Ave. | Los Angeles, CA 90040 USA

Tel: 800-322-6337 | Fax: 323-582-2941 | www.adj.com | lsupport@adj.com

ADJ Supply Europe B.V.

Junostraat 2 | 6468 EW Kerkrade | Netherlands

Tel: +31 45 546 85 00 | Fax: +31 45 546 85 99 | www.americandj.eu | service@americandj.eu

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check www.adj.com for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version	Notes
05/20/2024	1.0	1.01	Initial Release
04/25/2025	1.1	N/C	Update System Menu and Specifications
09/04/2026	1.2	N/C	Updated: General Info, Features, RGB Pixel Control Modes, Control Panel, System Menu, Maintenance Guidelines, Specifications; Added Index

CONTENTS

General Information	4
Features	6
Safety Guidelines	7
Overview	8
Installation	9
Driver Output Limitations	13
RGB Pixel Control	15
Max Patch	17
Control Panel	18
System Menu	19
Maintenance Guidelines	23
Specifications	24
Dimensions	25
Accessories	26
Index	27

GENERAL INFORMATION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information.

This product is intended for use by professionally trained personnel only, and is not suitable for private use.

Unpacking

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

Parts: To purchase parts online visit:

<http://parts.adj.com> (US)

<http://www.adjparts.eu> (EU)

ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST

Voice: 800-322-6337 | support@adj.com

ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 60 | support@adj.eu

ADJ PRODUCTS LLC USA

6122 S. Eastern Ave. Los Angeles, CA. 90040

323-582-2650 | www.adj.com | info@adj.com

ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands

+31 (0)45 546 85 00 | www.adj.eu | info@adj.eu

ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing its operational lifespan.

GENERAL INFORMATION

WARRANTY INFORMATION

For up-to-date warranty information regarding your device, please visit ADJ's warranty information page online or scan the QR codes below.



USA: <https://www.adj.com/pages/warranty-information>



EU: https://www.adj.eu/terms_and_conditions

PRODUCT REGISTRATION

To register your product, please visit the page below or scan the QR code.



USA: <https://www.adj.com/pages/product-warranty-registration>

FEATURES

- Power / data supply for ADJ Pixie Strip 30, Pixie Strip 60, and Pixie Strip 120
- Manual RGB mode
- Internal programs
- Manual Dimming
- Full Pixel Mapping Control
- Drives up to 8,160 Pixels via KlingNet, ArtNet, and sACN (1,020 Pixels per port)
- OLED screen with 4-button menu
- USB port for Firmware Updates

SAFETY GUIDELINES


For your own personal safety, please read and understand this manual completely before attempting to install or operate this device!

- Be sure to save the packing carton in the unlikely event that the device needs to be returned for service.
- Do not spill water or other liquids into or on to the device.
- Be sure that the voltage of the power source matches the required voltage for the device.
- Do not open up the device for any reason. There are no user serviceable parts inside.
- Disconnect the device's main power when left unused for long periods of time.
- Never connect this device to a dimmer pack.
- Do not attempt to operate this device if it has been damaged in any way.
- Never operate this device with the cover removed.
- To reduce the risk of electrical shock or fire, do not expose this device to rain or moisture.
- Do not attempt to operate this device if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in the event of an internal short.
- Disconnect from main power before making any type of connection.
- Never block the ventilation holes. Always be sure to mount this device in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- This unit is intended for indoor use only. Use of this product outdoors voids all warranties.
- Always mount this unit in a safe and stable manner.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on, or pinched by items placed upon or against them.
- The device should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen on, or liquid has been spilled into, the device.
 - C. The device has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

Ambient operating temperature range is from -4°F to 113°F (-20°C to 45°C). Do not operate this device when ambient temperature falls outside of this range!

KEEP FLAMMABLE MATERIALS AWAY FROM THIS FIXTURE!

OVERVIEW

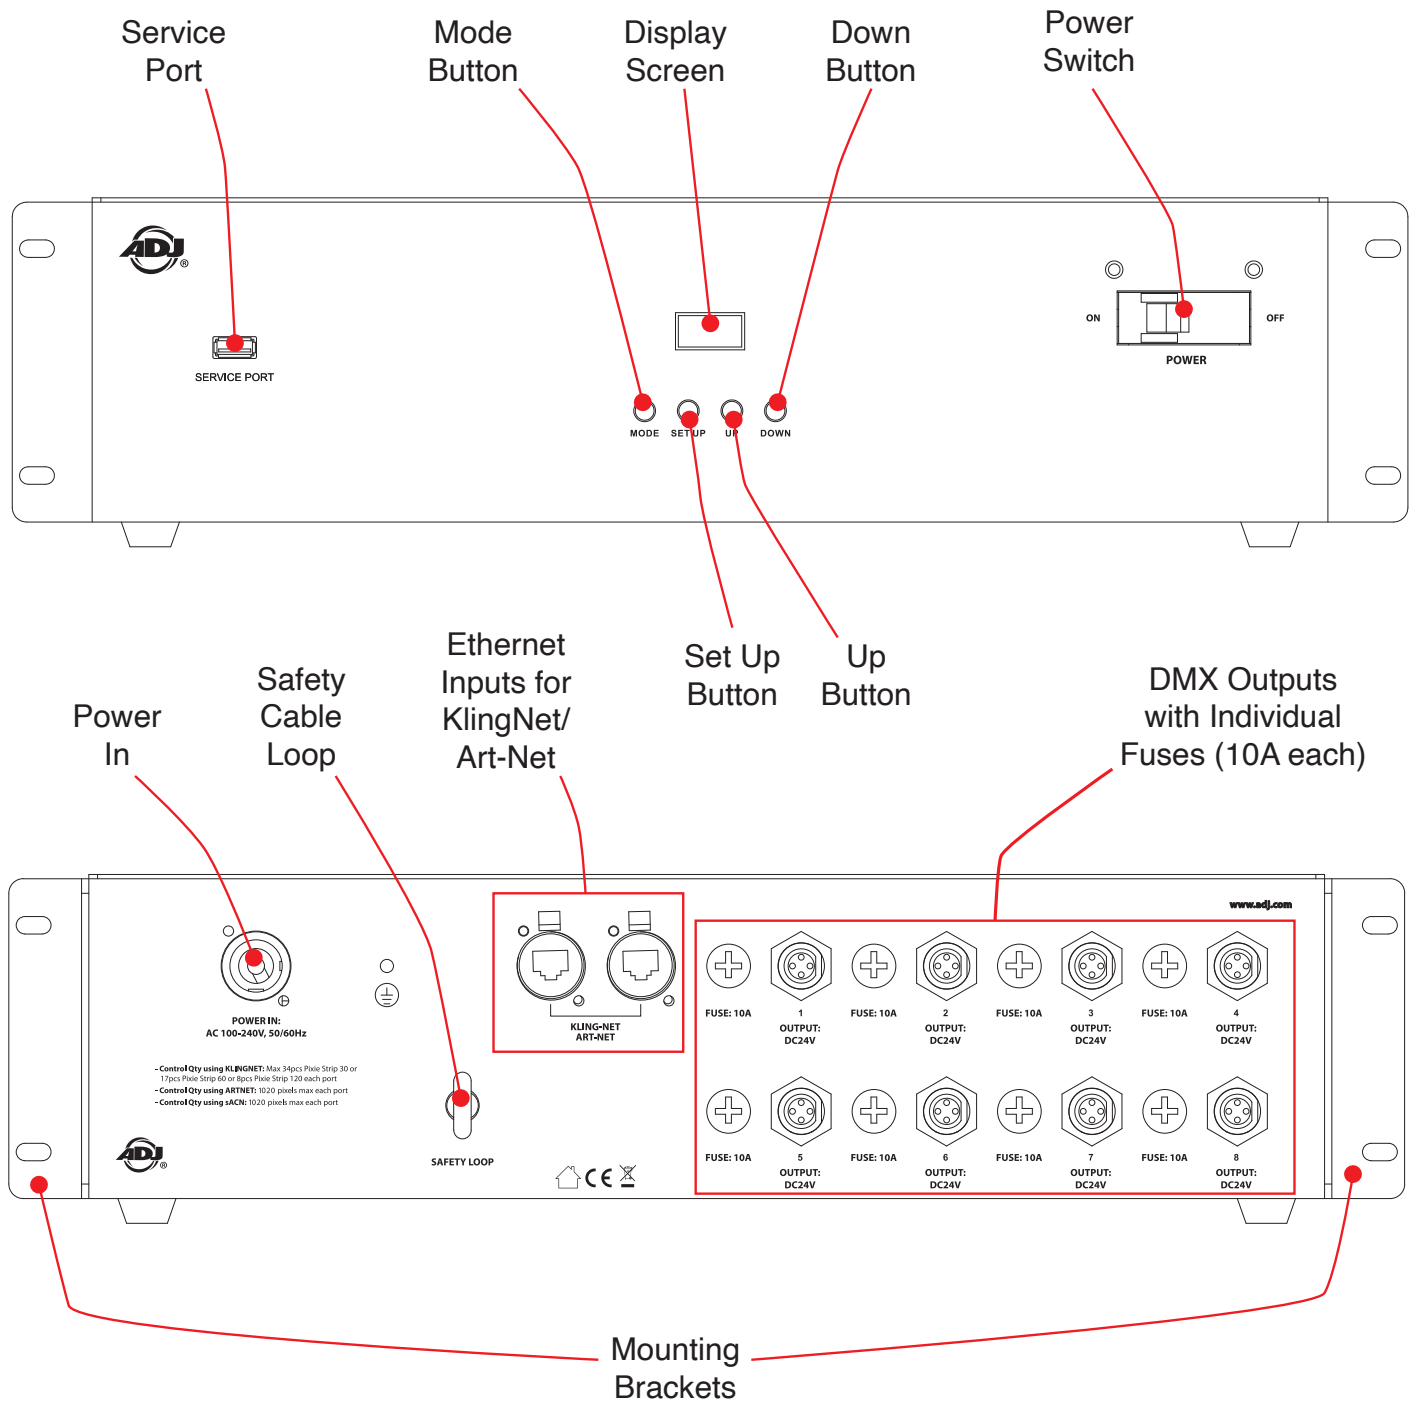

INSTALLATION

FLAMMABLE MATERIAL WARNING!

Keep device a minimum of 5.0 feet (1.5m) away from flammable material and/or pyrotechnics.

ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.

DO NOT INSTALL THE DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!

The driver **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before installing or mounting any device, a professional equipment installer **MUST** be consulted to determine whether the mounting structure or surface is properly certified to safely support the combined weight of the device and any relevant accessories.


Ambient operating temperature range is from **-4°F to 113°F (-20°C to 45°C)**. Do not operate this device when ambient temperature falls outside this range.

The device should be installed away from walking paths, seating areas, or areas where unauthorized personnel might be able to reach the device by hand.

INSTALLATION

CLAMP MOUNTING

This fixture features a mounting point in the middle of the top side for the installation of a mounting clamp. Additionally, the unit also features a safety cable loop on side face, near the Klingnet/Artnet Port (see the illustration below). When mounting the fixture to a truss or any other suspended or overhead installation, be sure to secure an appropriately rated mounting clamp (not included) to the device. Attach a separate **SAFETY CABLE** of the appropriate weight rating to the provided safety cable loop.

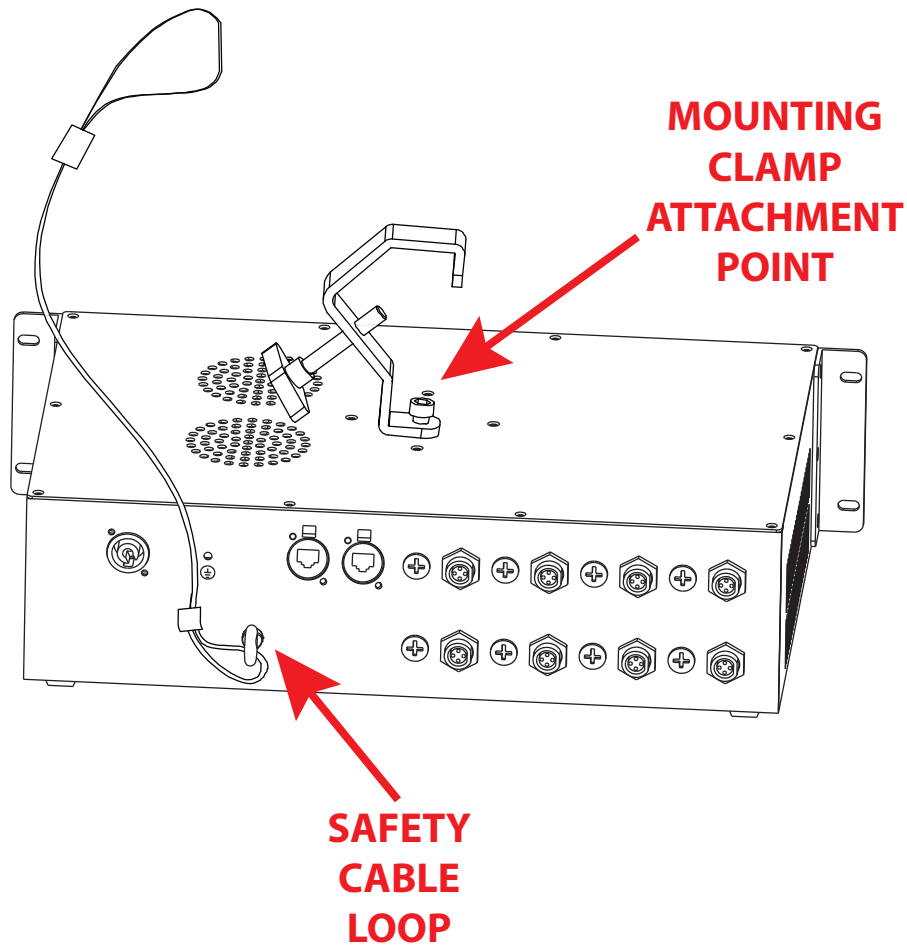

SAFETY CABLE:




ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.

INSTALLATION

RACK MOUNTING


This device can be mounted in a standard 19-inch rack using the mounting brackets located on each side of the device. Make sure to use mounting hardware that fits the mounting holes on the device as well as the rack itself. Use all four (4) points on the mounting brackets to ensure that the device is mounted securely. Please see the illustration below for reference.

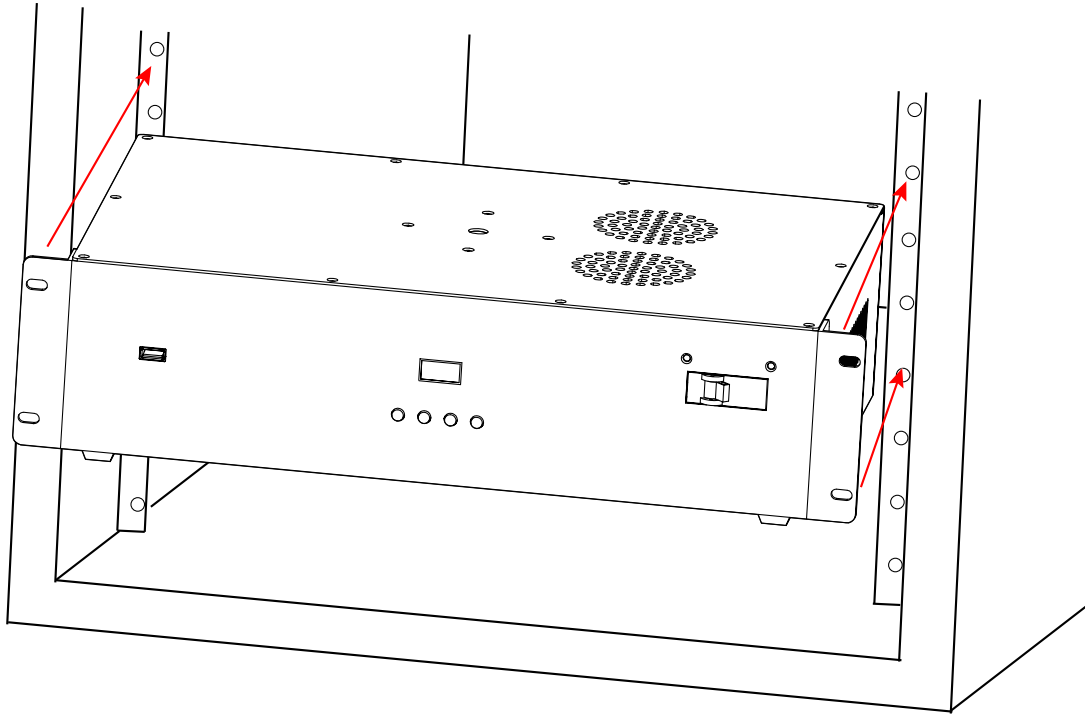

INSTALLATION


MULTIPLE DRIVERS

Up to five (5) Pixie Driver 8000 V2 devices may be daisy-chained directly together and linked to a single controller. See the image below for reference. Please note that the controller must be set to KlingNet, Art-net, or sACN control mode. **Do NOT daisy-chain more than five (5) devices directly together.**

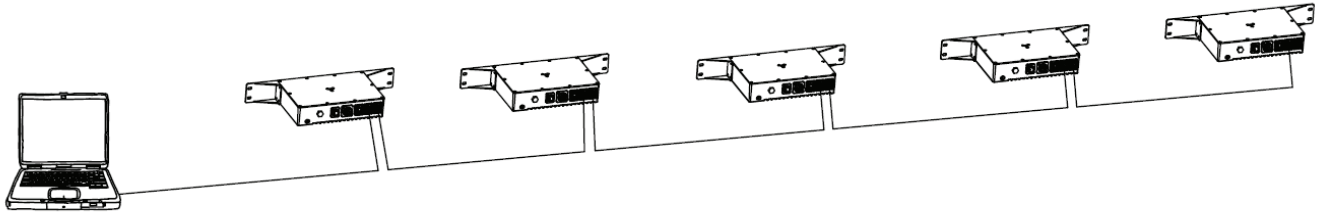

If more than five (5) devices are required, a one-gigabit ethernet switch may be used to expand the size of the network. However, even in this case, no more than ten (10) branches from the ethernet switch are allowable, with each branch containing up to five (5) daisy-chained devices. This permits a maximum of fifty (50) devices to be linked to a single controller, as shown in the image below.

Do NOT exceed this number of devices!

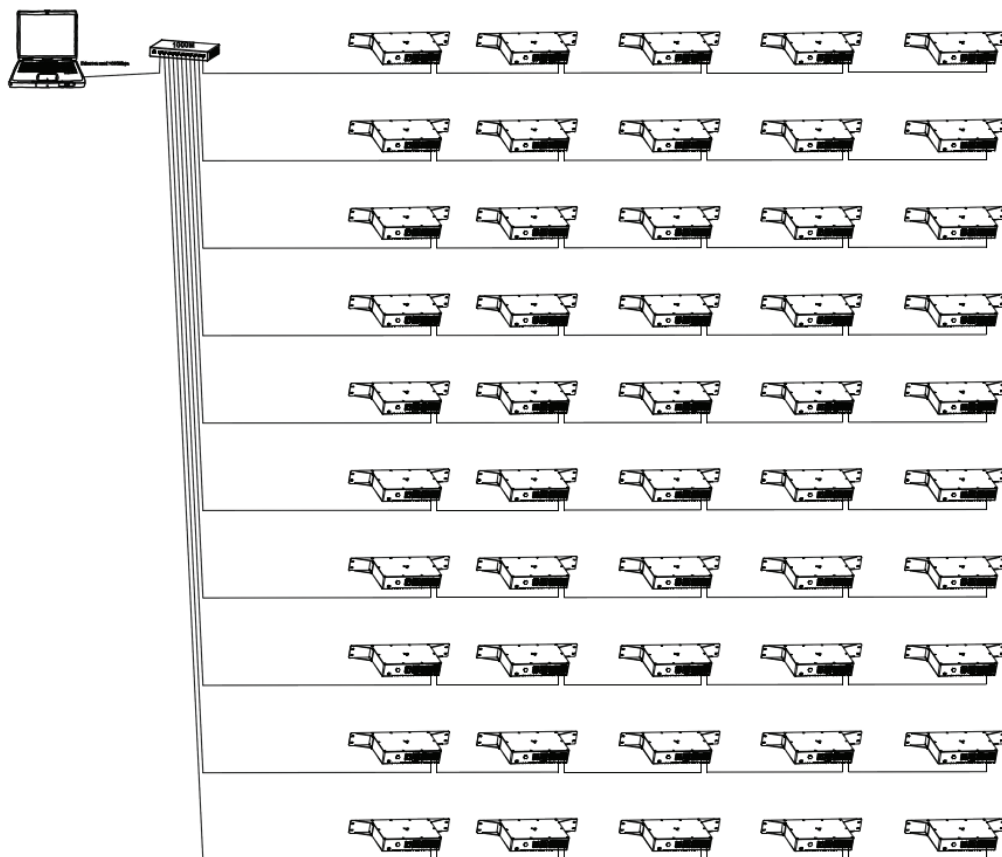

ALLOWABLE CABLE LENGTHS

16-AWG 4-pin extension cable may be used to link multiple devices. However, please take note of maximum allowable cable lengths, as listed below.

- Max length of cable connecting a controller and a device: 59 feet (18m)
- Max length of cable connecting two devices: 32 feet (10m)
- Max total cable length in a single chain: 98 feet (30m) including the lengths of the lighting strip(s)

DRIVER OUTPUT LIMITATIONS

There is a limitation to how many pixels can be controlled by each driver output port, which in turn determines the maximum number of lighting fixtures that can be controlled by a single output or driver.

The values listed in the following tables for number of fixtures per driver port/driver unit are representative of the maximum number of fixtures that can be connected if the fixtures used are all of the same model type, with individual pixel control.

For example, if you connect only Pixie Strip 30s to the driver, and operate the driver in Kling-Net mode, you can connect up to 34 units of that model type to each driver port. This is defined by the fact that each driver port can handle a maximum of 1020 pixels, and each Pixie Strip 30 fixture is made up of 30 pixels. Therefore, you have 1020 pixels per driver port, divided by 30 pixels per fixture, which equals 34 fixtures per driver port.

It is possible to mix and match Pixie Strip model types that are attached to a single driver port. In this case, the important thing to keep in mind is the maximum number of pixels per driver port.

As long as this value is not exceeded, any combination of Pixie Strip 30s, 60s, and 120s may be used.

MODEL	TOTAL PIXELS	TOTAL CONTROL CHAN.	KLING-NET / ART-NET / sACN MAX PIXELS PER PORT = 1020 MAX PIXELS PER DRIVER = 8160			
			MAX FIXTURES per DRIVER PORT	MAX PIXELS per DRIVER PORT	MAX FIXTURES per DRIVER UNIT	MAX PIXELS per DRIVER UNIT
Pixie Strip 30	30	90	34	1020	272	8160
Pixie Strip 60	60	180	17	1020	136	8160
Pixie Strip 120	120	360	8	960	64	7680

DRIVER OUTPUT LIMITATIONS

Your Pixie Driver 8000 V2 is programmed not to allow Pixie Strip fixtures to be added in such a way that the maximum number of pixels per port would be exceeded. This is done by limiting the number of Pixie Strip units that can be selected in the System Menu based on what has already been set up on the unit.

If we look at the example from the previous section, where 34 Pixie Strip 30s have been set up on a single port in Kling-Net mode, the System Menu will not allow any further fixtures to be set up on that port, regardless of model. This is because 34 fixtures, times 30 pixels per fixture, occupies 1020 pixels. If we then tried to set up a Pixie Strip 60, the System Menu would not allow any values other than “0” to be selected, because the port has no remaining free pixel capacity.

PIXELS IN USE		PIXELS FREE
34 x Pixie Strip 30	1020 pixels	1020 pixel capacity - 1020 pixels in use 0 pixels free
0 x Pixie Strip 60	0 pixels	
0 x Pixie Strip 120	0 pixels	
	1020 total pixels in use	

In this case, we would first need to “make room” on this driver port by reducing the number of Pixie Strip 30s that are set up. If we reduce the number of Pixie Strip 30s by two units, we then have a total free pixel capacity of 60 pixels on this port.

PIXELS IN USE		PIXELS FREE
32 x Pixie Strip 30	960 pixels	1020 pixel capacity - 960 pixels in use 60 pixels free
0 x Pixie Strip 60	0 pixels	
0 x Pixie Strip 120	0 pixels	
	960 total pixels in use	

Now that we have freed up pixels on this driver port, we are able to add the Pixie Strip 60, as desired. The System Menu now allows you to increase the number of Pixie Strip 60s on this driver port to 1, *but it will not allow you to increase the number any higher* because there are not enough pixels free to add more than 1 Pixie Strip 60. Notice, too, that the only selectable value for Pixie Strip 120s is “0” due to the fact that 60 free pixels is not enough to run a single Pixie Strip 120.

PIXELS IN USE		PIXELS FREE
32 x Pixie Strip 30	960 pixels	1020 pixel capacity - 1020 pixels in use 0 pixels free
1 x Pixie Strip 60	60 pixels	
0 x Pixie Strip 120	0 pixels	
	1020 total pixels in use	


If you are having trouble adding the desired number of fixtures to a driver port, double check the number of fixtures of other Pixie Strip models that have been set up to see if they are using up all of the available pixel space on that port.

RGB PIXEL CONTROL MODES

This feature gives the user the ability to adjust the RGB pixel control mode of the device. Individual pixels may be controlled independently for finer control over the resolution of the device's lighting display. Alternately, multiple individual pixels may be grouped together under a common set of control channels in order to reduce the number of required control channels. This also reduces the effective pixel count for each fixture, thereby allowing an increased number of fixtures to be operated off of the same driver port (see the **Driver Output Limitations** section). The downside to this is the reduced resolution of the lighting display.


In each pixel control mode, the first number denotes the number of control groups that LEDs will be divided into, while the second number denotes the number of individual LEDs that will make up each control group. Each control group will always occupy 3 DMX channels (for Red, Green, and Blue control). This means that within each control group, all LEDs will be controlled by the same set of 3 DMX channels.

For example, when operating a Pixie Strip 30, selecting **15x2** mode means that the fixture's LEDs will be divided into 15 RGB control groups, with each group containing 2 LEDs. See the illustration below:

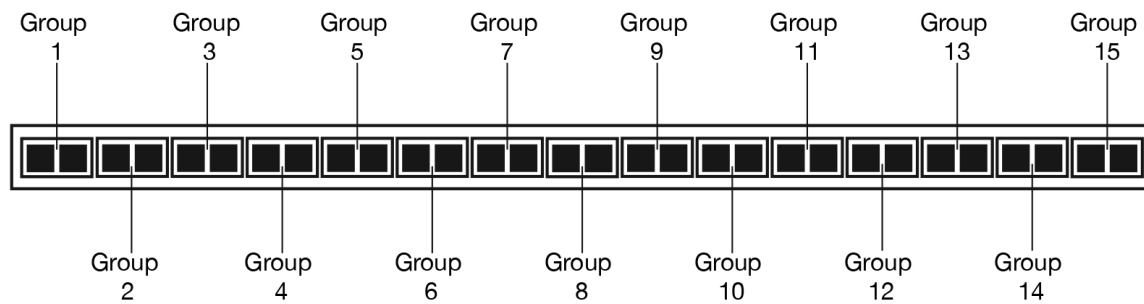

In this mode, a total of 45 DMX channels are used: 3 DMX channels (for Red, Green, Blue) per group multiplied by 15 groups.

If there are not enough unused DMX channels available to accommodate this set-up, one possible solution is to select a pixel control mode that will decrease the number of control groups. For instance, selecting **10x3** mode will result in the LED display being divided into 10 RGB control groups each containing 3 LEDs. Therefore, the number of DMX channels required drops to 30: 10 control groups multiplied by 3 DMX channels (for Red, Green, and Blue) per group. See the illustration below:

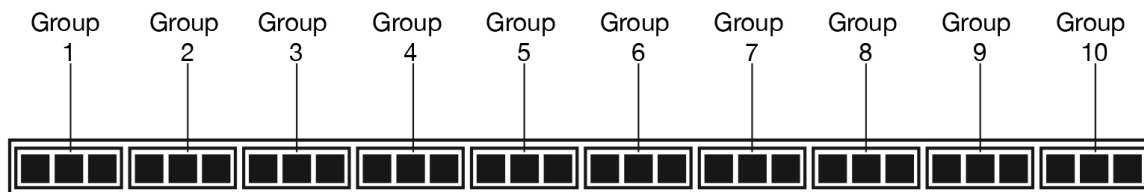

Available pixel control modes for each Pixie Strip model are shown on the next page.

RGB PIXEL CONTROL MODES


Available pixel control modes:

Pixie Strip 30	Pixie Strip 60	Pixie Strip 120
30x1	60x1	120x1
15x2	30x2	60x2
10x3	20x3	40x3
6x5	15x4	30x4
5x6	12x5	24x5
3x10	10x6	20x6
2x15	6x10	15x8
	5x12	12x10
	4x15	10x12
	3x20	8x15
	2x30	6x20
		5x24
		4x30
		3x40
		2x60

MAX PATCH

In Artnet or sACN mode, this driver features a Max Patch function, which allows the user to configure a group of fixtures into an assembly that resembles a large video panel. Follow the steps below:

1. Link your fixtures to the driver. A string of connected fixtures may be connected to each port, as long as the number of pixels per port conforms to the limits listed in the KlingNet/Artnet/sACN table in the **Driver Output Limitations** section of this manual.

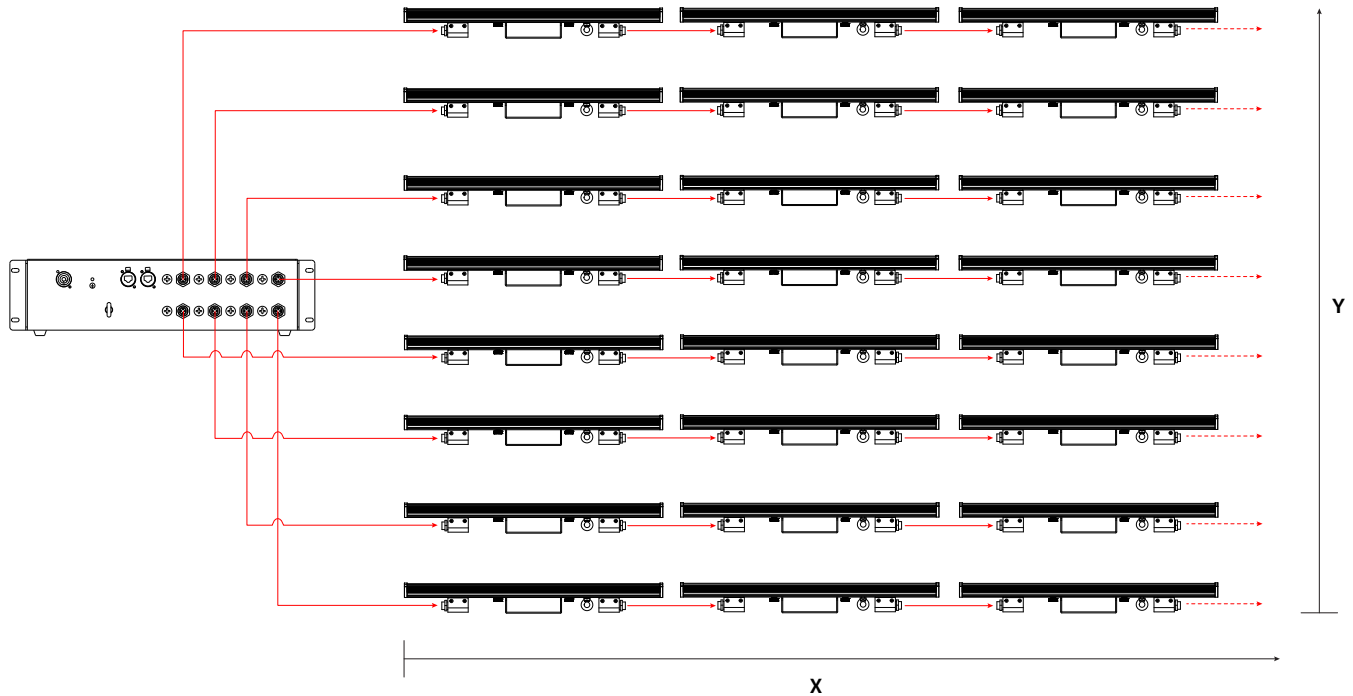


2. In the system menu, navigate to either **Artnet > Port x Set > Max Patch En/Dis** or **sACN > Port x Set > Max Patch En/Dis**, depending on which mode is in use. Press the SET UP button, then use the UP and DOWN buttons to toggle this setting to “Enable”.
3. Navigate to either **Artnet > Port x Set > Max Patch** or **sACN > Port x Set > Max Patch**, depending on which mode is in use. Press the SET UP button.
4. Use the UP and DOWN buttons to set values for X and Y. X and Y represent the number of pixels in the patch as defined in the illustration above. Please note, the values for X and Y are in terms of individual lighting pixels, and NOT whole lighting fixtures. For example, if the fixtures in the illustration above are Pixie Strip 30s (which have 30 pixels per fixture), then X = 90 pixels (3 units x 30 pixels per unit), and Y = 4 pixels.

CONTROL PANEL

The device includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made (see image below).

- The **MODE** button is used to cycle through main menu options, or to return to the previous menu.
- The **SETUP** button is used to select an option in either the main menu or the sub-menu of any main menu item, and to cycle through the sub-menu options.
- The **UP** and **DOWN** buttons are used to adjust the values of the sub-menu options.

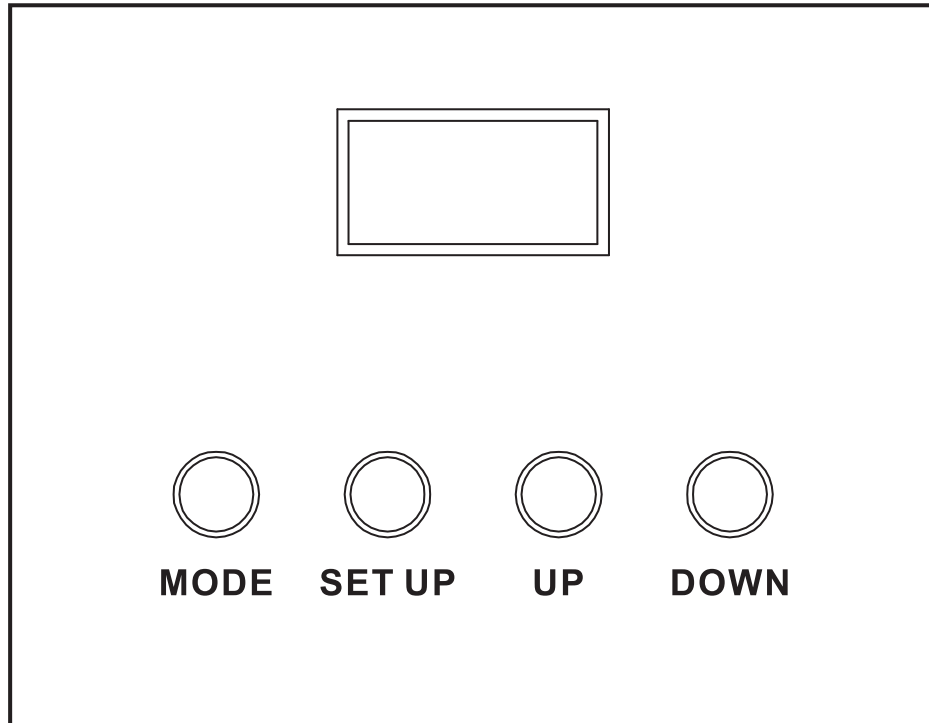

DMX ADDRESS FOR PIXIE STRIPS SETUP

When setting up this driver to control Pixie Strips in either ArtNet Mode or sACN Control Mode, the user has the ability to manually select the DMX address by navigating to the “Pixie Strip Setup” sub-menu, then selecting the “DMX Address” option. However, selecting this value manually is NOT necessary, as this driver is intelligent enough to assign the DMX addresses automatically according to the number of control channels required by each device being controlled.

NOTE: To avoid the need to use many universes per port, each port has a limitation on the assignable DMX address. The max assignable DMX Address is 126.

SYSTEM MENU

MANUAL CONTROL	Red	000 - 255		Adjust red color intensity
	Green	000 - 255		Adjust green color intensity
	Blue	000 - 255		Adjust blue color intensity
	Port1 EN / DIS	Enable / Disable		Enable or disable output 1
	Port2 EN / DIS	Enable / Disable		Enable or disable output 2
	Port3 EN / DIS	Enable / Disable		Enable or disable output 3
	Port4 EN / DIS	Enable / Disable		Enable or disable output 4
	Port5 EN / DIS	Enable / Disable		Enable or disable output 5
	Port6 EN / DIS	Enable / Disable		Enable or disable output 6
	Port7 EN / DIS	Enable / Disable		Enable or disable output 7
	Port8 EN / DIS	Enable / Disable		Enable or disable output 8
KLINGNET	Port1 Out Set	Pixie Strip Setup	30 Number xx (Default = 00)	Set number of Pixie Strip 30s that this port will control
			60 Number xx (Default = 10)	Set number of Pixie Strip 60s that this port will control
			120 Number xx (Default = 00)	Set number of Pixie Strip 120s that this port will control
		Pixie Groups Set	30 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 30s
			60 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 60s
			120 xxx X xxx RGB pixels	Set the RGB grouping of Pixie Strip 120s
	...	...	...	...
	Port8 Out Set	Pixie Strip Setup	30 Number xx (Default = 00)	Set number of Pixie Strip 30s that this port will control
			60 Number xx (Default = 10)	Set number of Pixie Strip 60s that this port will control
			120 Number xx (Default = 00)	Set number of Pixie Strip 120s that this port will control
		Pixie Groups Set	30 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 30s
			60 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 60s
			120 xxx X xxx RGB pixels	Set the RGB grouping of Pixie Strip 120s

SYSTEM MENU

ARTNET	Port1 Out Set	Pixie Strip Setup	30 Number xx (Default = 00)	Set number of Pixie Strip 30s that this port will control
			60 Number xx (Default = 10)	Set number of Pixie Strip 60s that this port will control
			120 Number xx (Default = 00)	Set number of Pixie Strip 120s that this port will control
		Pixie Groups Set	30 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 30s
			60 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 60s
			120 xxx X xxx RGB pixels	Set the RGB grouping of Pixie Strip 120s
			DMX address: xxx	Set DMX starting address
		Universe Set Up	001 - 246	Set the DMX universe
		Max Patch	X: xxxx, Y: xxxx	Set patch length and width
		Max Patch En / Dis	Enable / Disable	Enable or disable max patch function
	...	...	...	...
	Port8 Out Set	Pixie Strip Setup	30 Number xx (Default = 00)	Set number of Pixie Strip 30s that this port will control
			60 Number xx (Default = 10)	Set number of Pixie Strip 60s that this port will control
			120 Number xx (Default = 00)	Set number of Pixie Strip 120s that this port will control
		Pixie Groups Set	30 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 30s
			60 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 60s
			120 xxx X xxx RGB pixels	Set the RGB grouping of Pixie Strip 120s
		Universe Set Up	001 - 246	Set the DMX universe
		Max Patch	X: xxxx, Y: xxxx	Set patch length and width
		Max Patch En / Dis	Enable / Disable	Enable or disable max patch function

SYSTEM MENU

sACN	Port1 Out Set	Pixie Strip Setup	30 Number xx (Default = 00)	Set number of Pixie Strip 30s that this port will control
			60 Number xx (Default = 10)	Set number of Pixie Strip 60s that this port will control
			120 Number xx (Default = 00)	Set number of Pixie Strip 120s that this port will control
		Pixie Groups Set	30 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 30s
			60 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 60s
			120 xxx X xxx RGB pixels	Set the RGB grouping of Pixie Strip 120s
			DMX address: xxx	Set DMX starting address
		Universe Set Up	001 - 247	Set the DMX universe
		Max Patch	X: xxxx, Y: xxxx	Set patch length and width
		Max Patch En / Dis	Enable / Disable	Enable or disable max patch function
	...	...	...	...
	Port8 Out Set	Pixie Strip Setup	30 Number xx (Default = 00)	Set number of Pixie Strip 30s that this port will control
			60 Number xx (Default = 10)	Set number of Pixie Strip 60s that this port will control
			120 Number xx (Default = 00)	Set number of Pixie Strip 120s that this port will control
		Pixie Groups Set	30 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 30s
			60 xx X xx RGB Pixels	Set the RGB grouping of Pixie Strip 60s
			120 xxx X xxx RGB pixels	Set the RGB grouping of Pixie Strip 120s
		Universe Set Up	001 - 247	Set the DMX universe
		Max Patch	X: xxxx, Y: xxxx	Set patch length and width
		Max Patch En / Dis	Enable / Disable	Enable or disable max patch function

SYSTEM MENU

PROGRAMS	Program Play	Program 001 - 016		Select built in program to run
		Speed 001 - 016		Select program speed
		Fade 001 - 016		Select program fade
		Phase Time 001 - 016		Select program phase time
	Port 1 Out Set	30 Number 00 - 34		Set number of Pixie Strip 30s that this port will control
		60 Number 00 - 17 Default = 10		Set number of Pixie Strip 60s that this port will control
		120 Number 00 - 08		Set number of Pixie Strip 120s that this port will control
	...	...		...
	Port 8 Out Set	30 Number 00 - 34		Set number of Pixie Strip 30s that this port will control
		60 Number 00 - 17 Default = 10		Set number of Pixie Strip 60s that this port will control
120 Number 00 - 08		Set number of Pixie Strip 120s that this port will control		
IP ADDRESS (Default Subnet Mask: 255.0.0.0)	Port 1 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	Set IP address of each port
	Port 2 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
	Port 3 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
	Port 4 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
	Port 5 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
	Port 6 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
	Port 7 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
	Port 8 Out Set	IP Address Setup	xxxx.xxx.xxx.xxx	
SETUP OPTIONS	Rotate Display	No / Yes		Rotate the display orientation
	Factory Restore	No / Yes		Reset unit to default factory settings
SOFTWARE VERSION	Port1 Vx.xx			Display software version for each output port
	...			
	Port8 Vx.xx			
SERVICE	Software Update	Passcode = 011		Update unit software
		Update Software Yes / No		

NOTE: Although the Pixie Curve 60 fixture does not appear in the System Menu, it is still compatible with this driver, and it can be controlled by selecting the setting(s) for the Pixie Strip 60.

MAINTENANCE GUIDELINES



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this device. Please refer all other service issues to an authorized ADJ service technician. Should you need any spare parts, please order genuine parts from your local ADJ dealer.

Please refer to the following points during routine inspections:

- A. A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- B. Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- C. Check for any deformations on the housing, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- D. Electric power supply cables must not show any damage, material fatigue, or sediments.

NEVER remove the ground prong from the power cable.

SOFTWARE UPDATES

For software updates, please contact ADJ service to obtain a software uploader and detailed instructions. Refer to the ***General Information*** section of this manual for contact information.

SPECIFICATIONS

Control Features:

- Power / data supply for ADJ Pixie Strip 30, Pixie Strip 60, Pixie Strip 120, and Pixie Curve 60
- Manual RGB mode
- Internal programs
- Manual Dimming
- Full Pixel Mapping Control
- Drives up to 8,160 Pixels via ArtNet or sACN (1,020 Pixels per port)
- OLED screen with 4-button menu
- USB port for Firmware Updates

Control Quantity:

- Art-Net / sACN: 34x Pixie Strip 30s; 17x Pixie Strip 60s; 8x Pixie Strip 120s; 17x Pixie Curve 60s
(Per port. Or any combination not exceeding 1,020 pixels per port)
- ***Default Subnet Mask: 255.0.0.0***

Connections:

- Power: PowerLock Input
- Two locking RJ45 ports
- Eight 4-pin DC24V power/data outputs to Pixie Strips

Mounting Options:

- Bolt to add a clamp to hang from truss (clamp and truss not included)
- Includes 19-inch rack mount ears
- Safety eye

Electrical:

- Multi-voltage operation: AC 100-240V, 50/60Hz
- Power Consumption: 1,600W max
- -4°F to 113°F (-20°C to 45°C)

Dimensions / Weight:



- Dimensions (LxWxH): 11.8" x 18.9" x 4.7" / 300.3mm x 480mm x 120mm
- Weight: 13.4 lbs. / 6.1 kg.

Approvals:

- CE I cETLus (Pending)

DIMENSIONS

Drawing not to scale

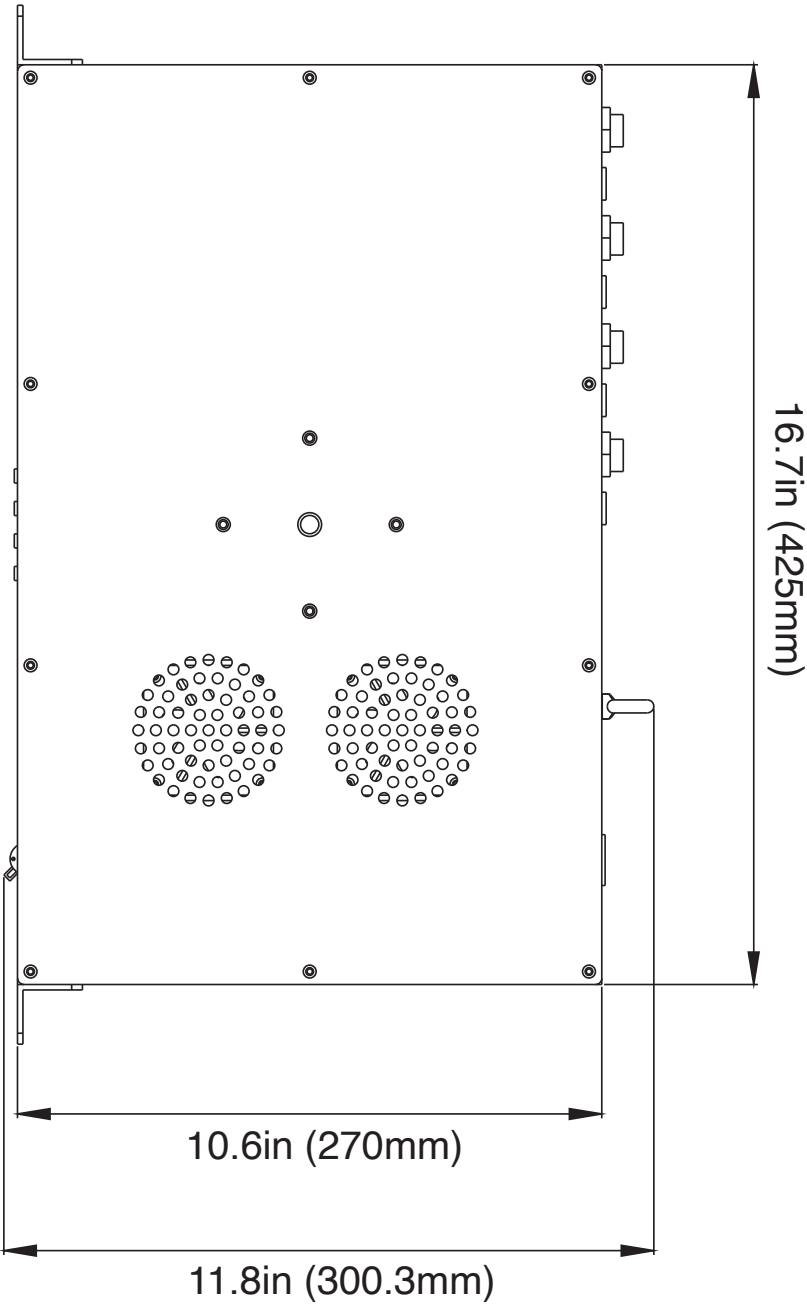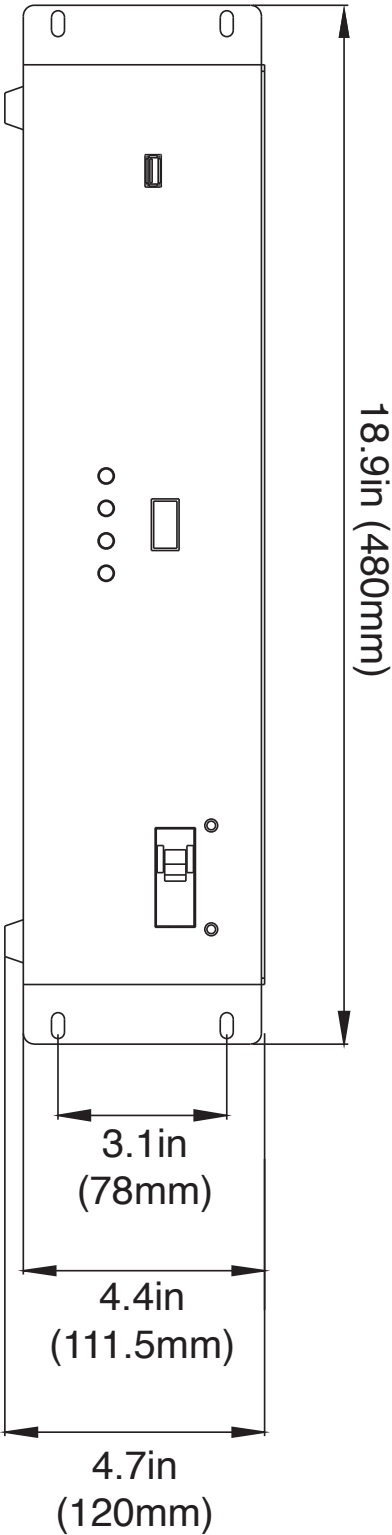

ACCESSORIES

Order Code	Description
PIX158	1-foot Pixie Strip Link Cable
PIX174	3-foot Pixie Strip Link Cable
PIX188	5-foot Pixie Strip Link Cable
PIX200	10-foot Pixie Strip Link Cable
PIX213	15-foot Pixie Strip Link Cable
PIX229	25-foot Pixie Strip Link Cable
PIX242	50-foot Pixie Strip Link Cable

INDEX

4-Pin Power/Data Outputs, 12, 24
1,020 Pixels per Port, 6, 13–14, 24
8,160-Pixel Capacity, 6, 13, 24

Accessories, 26
Ambient Operating Temperature, 7, 9, 24
Art-Net, 6, 12, 17–18, 20, 24

Cable Length Limits, 12
Clamp Mounting, 10
Control Panel, 8, 18
Control Quantity, 24

Dimensions, 24–25
DMX Address, 18, 20–21
DMX Universe, 20–21
Driver Output Limitations, 13–14

Electrical Connections, 9
Ethernet, 8, 12, 24
Ethernet Switch, 12

Factory Restore, 22
Fade, 22
Firmware Updates, 6, 23–24
Fixture Limits, 13–14
Full Pixel Mapping Control, 6, 24

IP Address, 22

Kling-Net, 6, 12–13, 19

Maintenance, 23
Manual Control, 19
Manual RGB Mode, 6, 19, 24
Max Patch, 17, 20–21
Mounting Brackets, 8, 11
Mounting Clamp Attachment Point, 10
Multiple Drivers, 12

Network Daisy-Chaining, 12

OLED Display, 6, 8, 24
Output Ports, 8, 13–14, 19–22

Phase Time, 22
Pixel Control Modes, 15–16
Pixel Groups, 15–16, 19–21
Pixel Mapping, 6, 15–17, 24
Pixie Curve 60, 22, 24
Pixie Strip 30, 6, 13–16, 19–24
Pixie Strip 60, 6, 13–16, 19–24
Pixie Strip 120, 6, 13–16, 19–24
Pixie Strip Setup, 18–21
Power Consumption, 24
Power Input, 8, 24
PowerLock Input, 24
Power Switch, 8
Program Play, 22
Programs, Internal, 6, 22, 24

Rack Mounting, 11, 24
RGB Control Groups, 15–16
RJ45 Ports, 8, 24
Rotate Display, 22

sACN, 6, 12–13, 17–18, 21, 24
Safety Cable, 8, 10
Safety Guidelines, 7
Service Port, 8
Software Update, 22–23
Software Version, 22
Subnet Mask, 22, 24
System Menu, 14, 18–22

Universe Setup, 20–21
USB Port, 6, 24

Ventilation Clearance, 7
Voltage, 7, 24

Weight, 24

