



# ME 4

Clip-On Microphone

Quick Guide

Kurzanleitung

Guide de démarrage rapide

Guida rapida

Instrucciones resumidas

Instruções resumidas

Beknopte gebruiksaanwijzing

Krótki instrukcja obsługi

Snabbguide

Kort vejledning

Pikaohje

Σύντομες οδηγίες

Kısa Kılavuz

Краткая инструкция

快速指南

快速使用指南

クイックガイド

요약 안내서

**SENNHEISER**



[www.sennheiser.com/documentation](http://www.sennheiser.com/documentation)



[www.sennheiser.com/download](http://www.sennheiser.com/download)

Sennheiser electronic SE & Co. KG



Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Publ. 02/26, 587438/A05


## In the box




## Setup

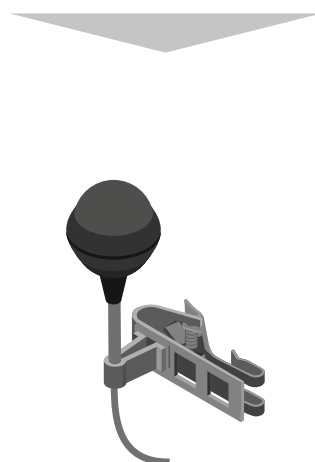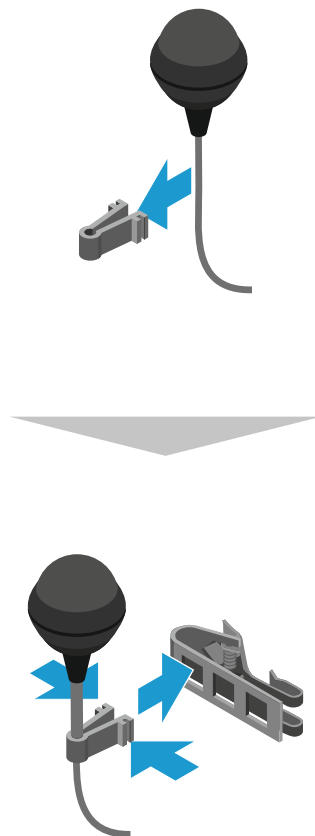


## Setup

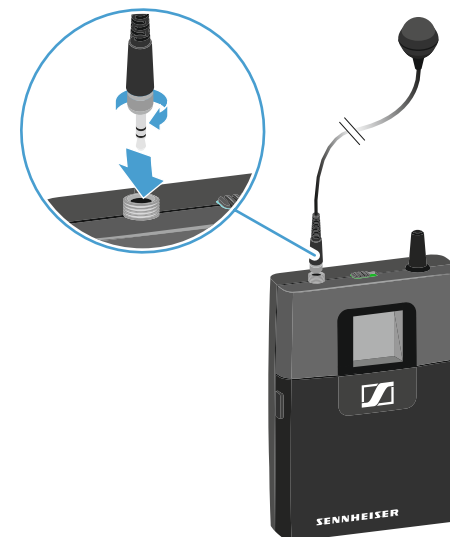


## Accessory

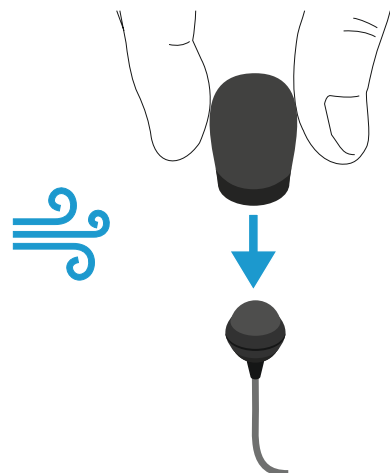

## Wearing the microphone

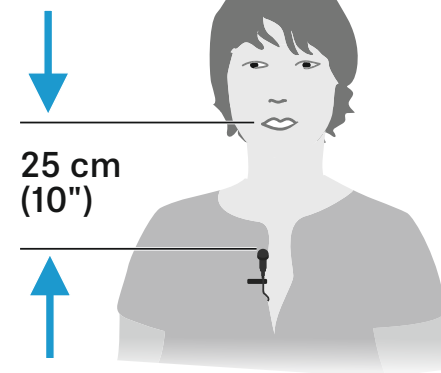

Cleaning

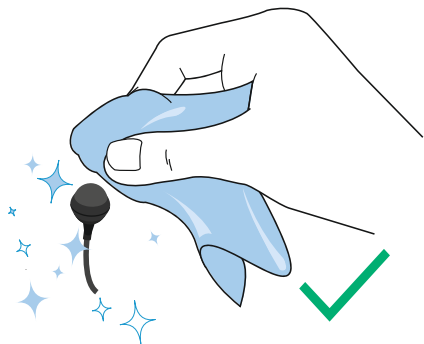

Specifications

|                                   |                                    |
|-----------------------------------|------------------------------------|
| Transducer principle              | pre-polarized condensor microphone |
| Pick-up pattern                   | cardioid                           |
| Sensitivity in free field (1 kHz) | 40 mV/Pa                           |
| Max. SPL at 1 kHz                 | 120 dB                             |
| Frequency response                | 50 to 18,000 Hz                    |
| Equivalent noise level A-weighted | 31 dB                              |
| Connector                         | 3.5 mm jack                        |
| Cable length                      | approx. 1.60 m                     |
| Supply voltage                    | 10 V                               |
| Diameter of microphone            | 13 mm                              |

Connector assignment

