


Instruction sheet : inside membrane

The following images are for the Festival model, but the Arko family uses a similar installation method.

Tightening the straps :

- Straps along blue dashes, you should be able to fit vertically two fingers between the strap and the structure.
- Straps along orange dots should be tied as loose as the straps allow it.
- The bottom strap located in the centre longitudinal row goes at the right of the joint - when looking from the outside (for position, see the two asterisks on the image below).

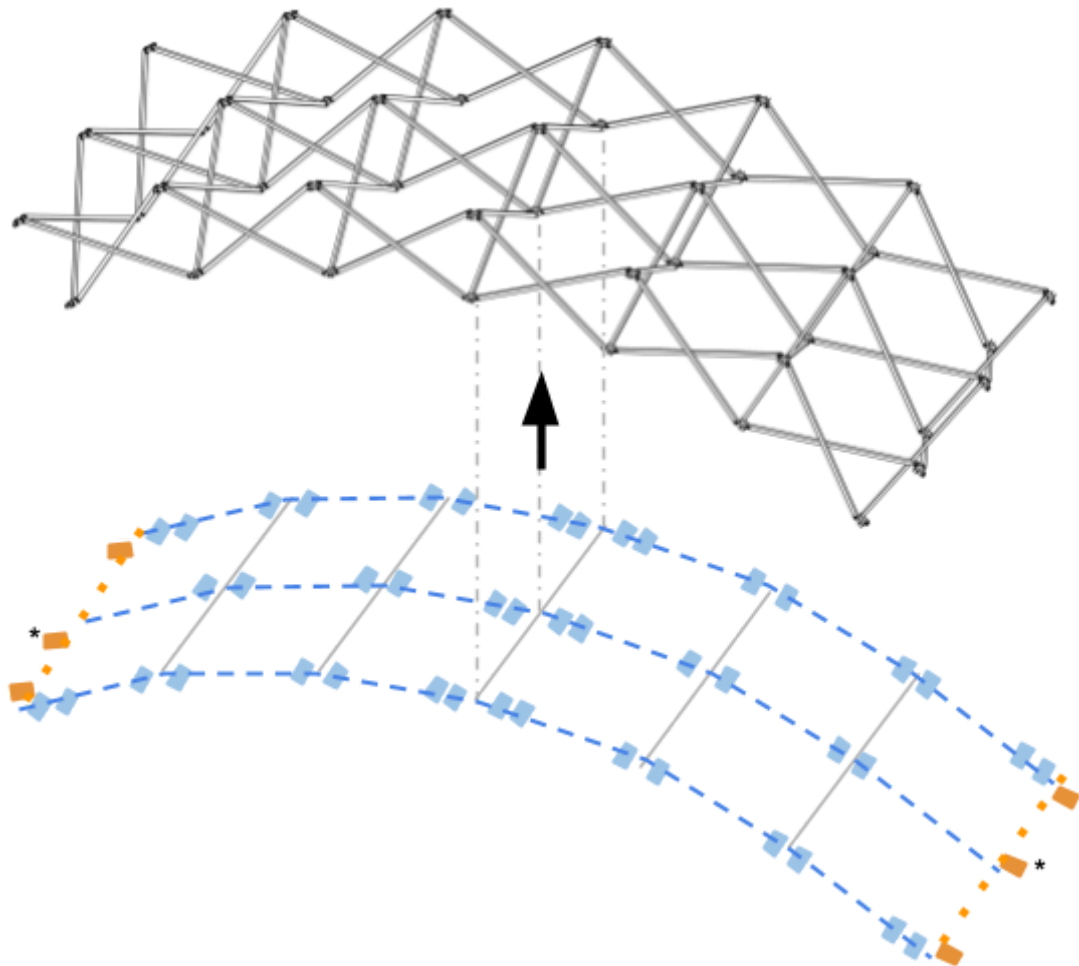

Before unfolding the structure, double-check every strap to make sure they are correctly positioned and tightened

Failure to follow this step may result in damaging the membrane!